



A Tech Authority, Inc
3857 Schaefer Ave, Ste C
Chino, CA. 91710
(909)972-7520
www.atechauthority.com

HEIDENHAIN



Angle Encoders with Integral Bearing

June 2006



Angle encoders with integral bearing and integrated stator coupling



Angle encoders with integral bearing for separate shaft coupling

Information on

- Angle encoders without integral bearing
 - Rotary encoders
 - Position encoders for servo drives
 - Exposed linear encoders
 - Linear encoders for numerically controlled machine tools
 - Interface electronics
 - HEIDENHAIN controls
- is available on request as well as on the Internet at www.heidenhain.de.

This catalog supersedes all previous editions, which thereby become invalid. The basis for ordering from HEIDENHAIN is always the catalog edition valid when the contract is made.

Standards (ISO, EN, etc.) apply only where explicitly stated in the catalog.

Content

Overview				
HEIDENHAIN Angle Encoders			4	
Selection Guide	Absolute angle encoders with integral bearing		6	
	Incremental angle encoders with integral bearing		8	
	Angle encoders without integral bearing		10	
Technical Features and Mounting Information				
Measuring Principles Measuring standard, measuring principles			12	
Scanning the Measuring Standard			14	
Measuring Accuracy			16	
Mechanical Design Types and Mounting			18	
General Mechanical Information			22	
Specifications	Series or Model	System accuracy		
Angle encoders with integral bearing and integrated stator coupling	RCN 200 series	$\pm 5''/\pm 2.5''$	24	
	RON 200 series	$\pm 5''/\pm 2.5''$	26	
	RON 785	$\pm 2''$	28	
	RCN 700/RCN 800 series	$\pm 2''/\pm 1''$	$\varnothing 60 \text{ mm}$	30
			$\varnothing 100 \text{ mm}$	32
	RON 786	$\pm 2''$	34	
	RON 886/RPN 886	$\pm 1''$		
	RON 905	$\pm 0.4''$	36	
Angle encoders with integral bearing for separate shaft coupling	ROD 200 series	$\pm 5''$	38	
	ROD 780/ROD 880	$\pm 2''/\pm 1''$	40	
Electrical Connection				
Interfaces and Pin Layouts	Incremental signals	$\sim 1 V_{PP}$	42	
		\square TTL	44	
	Absolute position values	EnDat	46	
		Fanuc and Mitsubishi	53	
Connecting Elements and Cables			54	
General Electrical Information			58	
Evaluation and Display Units				
Display Units, Interpolation and Digitizing Electronics, Interface Cards			60	
HEIDENHAIN Measuring Equipment			62	

HEIDENHAIN Angle Encoders

The term angle encoder is typically used to describe encoders that have an accuracy of better than $\pm 5''$ and a line count above 10000.


In contrast, rotary encoders are encoders that typically have an accuracy of more than $\pm 10''$.

Angle encoders are found in applications requiring precision angular measurement to accuracies within several arc seconds.

Examples:

- Rotary tables on machine tools
 - Swivel heads on machine tools
 - C axes of lathes
 - Measuring machines for gears
 - Printing units of printing machines
 - Spectrometers
 - Telescopes
- etc.

The tables on the following pages list different types of angle encoders to suit the various applications and meet different requirements.

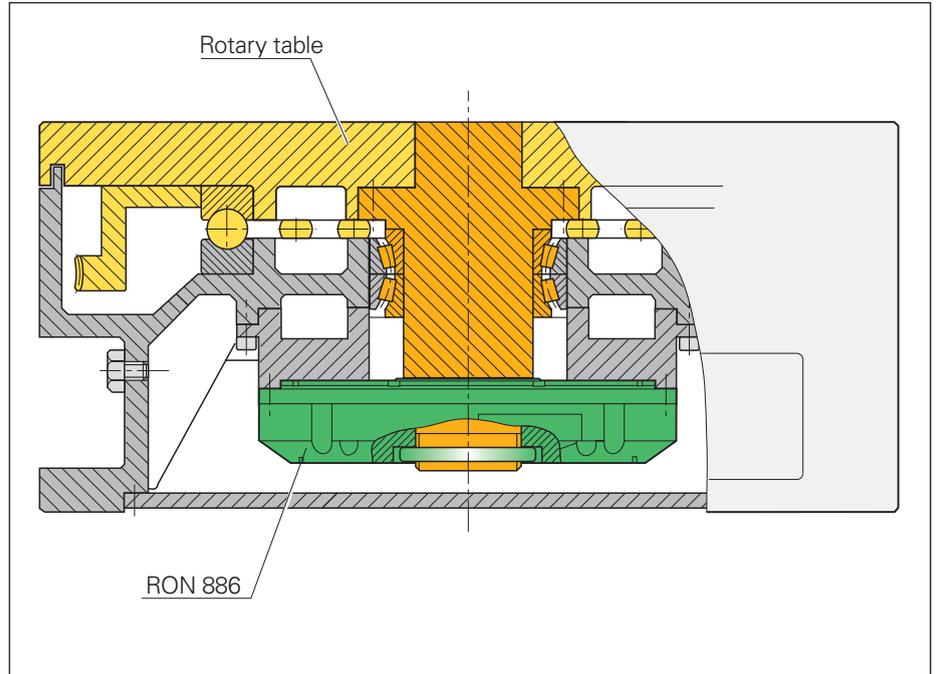

The **RON 886** angle encoder mounted onto the rotary table of a machine tool

Angle encoders can have one of the following mechanical designs:

Angle encoders with integral bearing, hollow shaft and integrated stator coupling

Because of the design and mounting of the stator coupling, it must only absorb that torque caused by friction in the bearing during angular acceleration of the shaft.

RCN, RON and **RPN** angle encoders therefore provide excellent dynamic performance. With an integrated stator coupling, the stated system accuracy also includes the deviations from the shaft coupling.

Other advantages:

- Compact size for limited installation space
- Hollow shaft diameters up to 100 mm for leading power cables, etc.
- Simple installation

Selection Guide

For absolute angle encoders, see pages 6/7.

For incremental angle encoders, see pages 8/9.



RON 886 incremental angle encoder



ROD 880 incremental angle encoder with **K 16** flat coupling

Angle encoders with integral bearing, for separate shaft coupling

ROD angle encoders with solid shaft are particularly suited to applications where higher shaft speeds and larger mounting tolerances are required. The shaft couplings allow axial tolerances of ± 1 mm.

Selection Guide on pages 8/9



ERA 4000 incremental angle encoder

Angle encoders without integral bearing

The **ERP** and **ERA** angle encoders without integral bearing (modular angle encoders) are intended for integration in machine elements or apparatuses. They are designed to meet the following requirements:

- Large hollow shaft diameter (up to 10 m with a scale tape)
- High shaft speeds up to 20000 rpm
- No additional starting torque from shaft seals
- Segment angles

Selection Guide on pages 10/11

You can find more detailed information on HEIDENHAIN angle encoders for integration on the Internet at www.heidenhain.de or in our *Angle Encoders without Integral Bearing* brochure.

Selection Guide

Absolute Angle Encoders with Integral Bearing

Series	Overall dimensions in mm	System accuracy	Recommd. meas. step ¹⁾	Mechanically perm. speed	Incremental signals	Signal periods/rev
With integrated stator coupling						
RCN 200		± 5"	0.0001°	3000 rpm	~ 1 V _{PP}	16 384
		± 2.5"			-	-
					-	-
					~ 1 V _{PP}	16 384
					-	-
		-			-	
-	-					
RCN 700		± 2"	0.0001°	1000 rpm	~ 1 V _{PP}	32 768
					-	-
					-	-
					~ 1 V _{PP}	32 768
					-	-
					-	-
RCN 800		± 1"	0.00005°	1000 rpm	~ 1 V _{PP}	32 768
					-	-
					-	-
					~ 1 V _{PP}	32 768
					-	-
					-	-

¹⁾ For position measurement

	Absolute position values	Absolute positions per revolution	Model	Page
	EnDat 2.2/02	67 108 864 \triangleq 26 bits	RCN 226	24
	EnDat 2.2/22	67 108 864 \triangleq 26 bits	RCN 226	
	Fanuc 02	8388 608 \triangleq 23 bits	RCN 223 F	
	Mit 02-4	8388 608 \triangleq 23 bits	RCN 223 M	
	EnDat 2.2/02	268 435 456 \triangleq 28 bits	RCN 228	
	EnDat 2.2/22	268 435 456 \triangleq 28 bits	RCN 228	
	Fanuc 02	134 217 728 \triangleq 27 bits	RCN 227 F	
	Mit 02-4	134 217 728 \triangleq 27 bits	RCN 227 M	
	EnDat 2.2/02	536 870 912 \triangleq 29 bits	RCN 729	30
	EnDat 2.2/22	536 870 912 \triangleq 29 bits	RCN 729	
	Fanuc 02	134 217 728 \triangleq 27 bits	RCN 727 F	
	Mit 02-4	134 217 728 \triangleq 27 bits	RCN 727 M	
	EnDat 2.2/02	536 870 912 \triangleq 29 bits	RCN 729	32
	EnDat 2.2/22	536 870 912 \triangleq 29 bits	RCN 729	
	Fanuc 02	134 217 728 \triangleq 27 bits	RCN 727 F	
	Mit 02-4	134 217 728 \triangleq 27 bits	RCN 727 M	
	EnDat 2.2/02	536 870 912 \triangleq 29 bits	RCN 829	30
	EnDat 2.2/22	536 870 912 \triangleq 29 bits	RCN 829	
	Fanuc 02	134 217 728 \triangleq 27 bits	RCN 827 F	
	Mit 02-4	134 217 728 \triangleq 27 bits	RCN 827 M	
	EnDat 2.2/02	536 870 912 \triangleq 29 bits	RCN 829	32
	EnDat 2.2/22	536 870 912 \triangleq 29 bits	RCN 829	
	Fanuc 02	134 217 728 \triangleq 27 bits	RCN 827 F	
	Mit 02-4	134 217 728 \triangleq 27 bits	RCN 827 M	



RCN 200



RCN 700
Ø 60 mm



RCN 800
Ø 100 mm

Selection Guide

Incremental Angle Encoders with Integral Bearing

Series	Overall dimensions in mm	System accuracy	Recommended meas. step ¹⁾	Mechanically perm. speed
With integrated stator coupling				
RON 200		± 5"	0.005°	3000 rpm
		± 2.5"	0.001°/0.0005° 0.0001°	
RON 700		± 2"	0.0001°	1000 rpm
RON 800 RPN 800		± 1"	0.00005° 0.00001°	1000 rpm
RON 900		± 0.4"	0.00001°	100 rpm
For separate shaft coupling				
ROD 200		± 5"	0.005°	10000 rpm
			0.0005°	
			0.0001°	
ROD 700		± 2"	0.0001°	1000 rpm
ROD 800		± 1"	0.00005°	1000 rpm

¹⁾ For position measurement
²⁾ After integrated interpolation

	Incremental signals	Signal periods/rev	Model	Page
		18000 ²⁾	RON 225	26
		180000/90000 ²⁾	RON 275	
	 1 V _{PP}	18000	RON 285	
	 1 V _{PP}	18000	RON 287	
	 1 V _{PP}	18000	RON 785	28
	 1 V _{PP}	18000/36000	RON 786	
	 1 V _{PP}	36000	RON 886	34
	 1 V _{PP}	180000	RPN 886	
	 11 μA _{PP}	36000	RON 905	36
		18000 ²⁾	ROD 220	38
		180000 ²⁾	ROD 270	
	 1 V _{PP}	18000	ROD 280	
	 1 V _{PP}	18000/36000	ROD 780	40
	 1 V _{PP}	36000	ROD 880	



RON 285



RON 786



RON 905









ROD 280



ROD 780

Selection Guide

Angle Encoders without Integral Bearing

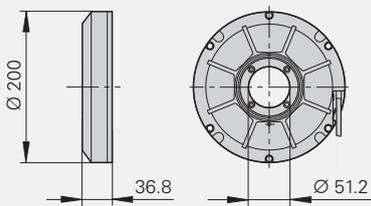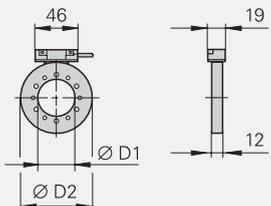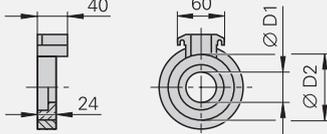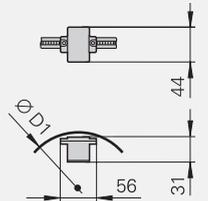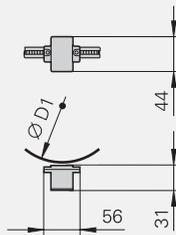Series	Overall dimensions in mm	Diameter D1/D2	Line count/ System accuracy ¹⁾	Recommended measuring step ³⁾	Mechanically perm. speed
Grating on solid scale carrier					
ERP 880 Glass disk with interferential grating		–	90000/± 1" (180000 signal periods)	0.00001°	≤ 1000 rpm
ERA 4x80 Steel circumferential scale drum with centering collar		D1: 76.75 mm to 331.31 mm D2: 40 mm to 270 mm	3000/± 9.4" to 52000/± 2.8"		≤ 10000 rpm to ≤ 2500 rpm
ERA 4x81 Steel circumferential scale drum with low weight and low moment of inertia		D1: 52.65 mm to 305.84 mm D2: 26 mm to 280 mm	4096/± 10.2" to 48000/± 2.8"		≤ 6000 rpm to ≤ 2000 rpm
ERA 4282 Steel circumferential scale drum for increased accuracy requirements		D1: 76.75 mm to 331.31 mm D2: 40 mm to 270 mm	12000/± 5.1" to 52000/± 2"		≤ 10000 rpm to ≤ 2500 rpm
ERA 180⁴⁾ Steel drum with axial grating		D1: 40 mm to 512 mm D2: 80 mm to 562 mm	6000/± 7.5" to 36000/± 2.5"	0.0015° to 0.0001°	≤ 20000 rpm to ≤ 3000 rpm
Grating on steel tape					
ERA 700 For inside diameter mounting		458.62 mm 573.20 mm 1146.10 mm	Full circle¹⁾ 36000/± 3.5" 45000/± 3.4" 90000/± 3.2	0.0002° to 0.00002°	≤ 500 rpm
		318.58 mm 458.62 mm 573.20 mm	Segment²⁾ 5000 10000 20000		
ERA 800 For outside diameter mounting		458.04 mm 572.63 mm	Full circle¹⁾ 36000/± 3.5" 45000/± 3.4"	0.0002° to 0.00005°	≤ 100 rpm
		317.99 mm 458.04 mm 572.63 mm	Segment²⁾ 5000 10000 20000		

1) Before installation. Additional error caused by mounting inaccuracy and inaccuracy from the bearing of the drive shaft are not included.

2) Angular segment from 50° to 200°; see *Measuring Accuracy*

3) For position measurement

4) For new applications use the ERA 4000 series

Incremental signals/ Grating period	Reference marks	Model	For more information
$\sim 1 V_{PP}/-$	One	ERP 880	Catalog: <i>Angle Encoders without Integral Bearing</i>
$\sim 1 V_{PP}/20 \mu m$	Distance-coded	ERA 4280C	
$\sim 1 V_{PP}/40 \mu m$		ERA 4480C	
$\sim 1 V_{PP}/80 \mu m$		ERA 4880C	
$\sim 1 V_{PP}/20 \mu m$		ERA 4281C	
$\sim 1 V_{PP}/40 \mu m$		ERA 4481C	
$\sim 1 V_{PP}/20 \mu m$	ERA 4282C		
$\sim 1 V_{PP}$	One	ERA 180	
$\sim 1 V_{PP}/40 \mu m$	Distance-coded (nominal increment of 1000 grating periods)	ERA 780C full circle	Catalog: <i>Angle Encoders without Integral Bearing</i>
		ERA 781C segment	
$\sim 1 V_{PP}/40 \mu m$	Distance-coded (nominal increment of 1000 grating periods)	ERA 880C full circle	
		ERA 881C segment with tensioning elements	
		ERA 882C segment without tensioning elements	



ERP 880



ERA 4000



ERA 180



ERA 780



ERA 880

Measuring Principles

Measuring Standard

HEIDENHAIN encoders incorporate measuring standards of periodic structures known as graduations. These graduations are applied to a glass or steel substrate. Glass scales are used primarily in encoders for speeds up to 10000 rpm. For higher speeds—up to 20000 rpm—steel drums are used. The scale substrate for large diameters is a steel tape.

These precision graduations are manufactured in various photolithographic processes. Graduations are fabricated from:

- extremely hard chromium lines on glass or gold-plated steel drums,
- three-dimensional structures etched into quartz glass, or
- matte-etched lines on gold-plated steel tape.

These photolithographic manufacturing processes—DIADUR and AURODUR—developed by HEIDENHAIN produce grating periods of:


- 40 μm with AURODUR
- 10 μm with DIADUR
- 4 μm with etched quartz glass

These processes permit very fine grating periods and are characterized by a high definition and homogeneity of the line edges. Together with the photoelectric scanning method, this high edge definition is a precondition for the high quality of the output signals.

The master graduations are manufactured by HEIDENHAIN on custom-built high-precision ruling machines.

Absolute Measuring Method

Absolute encoders feature multiple coded graduation tracks. The code arrangement provides the absolute position information, which is available immediately after restarting the machine. The track with the finest grating structure is interpolated for the position value and at the same time is used to generate an incremental signal (see *EnDat Interface*).

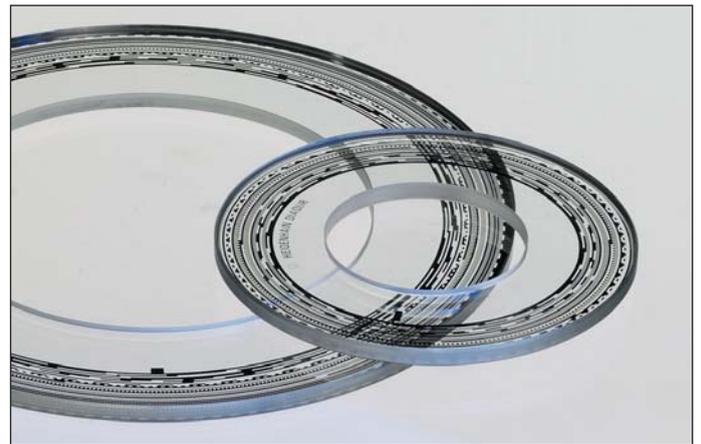

Circular graduations of absolute angle encoders



Schematic representation of a circular scale with absolute grating

Incremental Measuring Method

With the **incremental measuring method**, the graduation consists of a periodic grating structure. The position information is obtained **by counting** the individual increments (measuring steps) from some point of origin. Since an absolute reference is required to ascertain positions, the scales or scale tapes are provided with an additional track that bears a **reference mark**. The absolute position on the scale, established by the reference mark, is gated with exactly one measuring step. The reference mark must therefore be scanned to establish an absolute reference or to find the last selected datum.

In some cases, however, this may require a rotation up to nearly 360°. To speed and simplify such "reference runs," many encoders feature **distance-coded reference marks**—multiple reference marks that are individually spaced according to a mathematical algorithm. The subsequent electronics find the absolute reference after traversing two successive reference marks—meaning only a few degrees of traverse (see Nominal increment I in the table).

Encoders with distance-coded reference marks are identified with a "C" behind the model designation (e.g. RON 786C).

With distance-coded reference marks, the **absolute reference** is calculated by counting the signal periods between two reference marks and using the following formula:

$$\alpha_1 = (\text{abs } A - \text{sgn } A - 1) \times \frac{I}{2} + (\text{sgn } A - \text{sgn } D) \times \frac{\text{abs } M_{RR}}{2}$$

where:

$$A = \frac{2 \times \text{abs } M_{RR} - I}{GP}$$

and:

α_1 = Absolute angular position of the first traversed reference mark to the zero position in degrees

abs = Absolute value

sgn = Sign function (" +1 " or " -1 ")


M_{RR} = Measured distance between the traversed reference marks in degrees

I = Nominal increment between two fixed reference marks (see table)


GP = Grating period ($\frac{360^\circ}{\text{Line count}}$)

D = Direction of rotation (+1 or -1)
Rotation to the right (as seen from the shaft side of the angle encoder—see Mating Dimensions) gives "+1"

Line count z	Number of reference marks	Nominal increment I
36000	72	10°
18000	36	20°

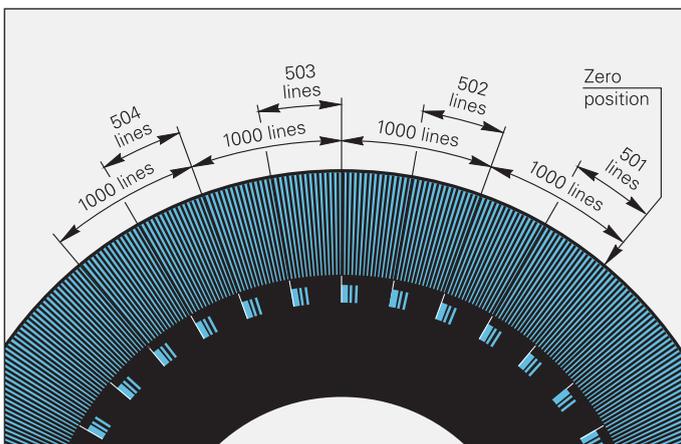

Schematic representation of a circular scale with distance-coded reference marks

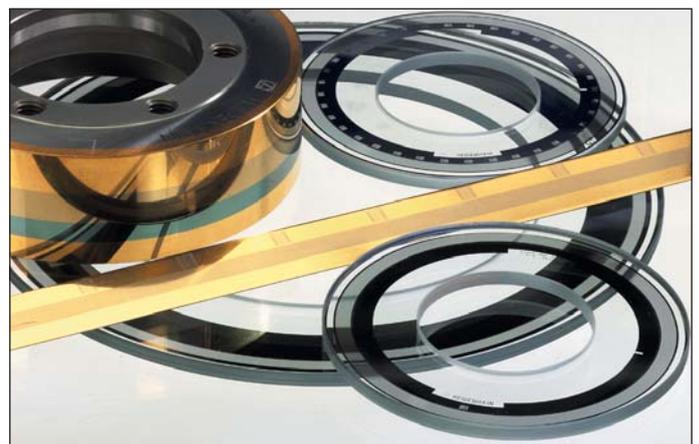

Circular graduations of incremental angle encoders

Scanning the Measuring Standard

Photoelectric Scanning

Most HEIDENHAIN encoders operate using the principle of photoelectric scanning. The photoelectric scanning of a measuring standard is contact-free, and therefore without wear. This method detects even very fine lines, no more than a few microns wide, and generates output signals with very small signal periods.

The finer the grating period of a measuring standard is, the greater the effect of diffraction on photoelectric scanning. HEIDENHAIN uses two scanning principles with angle encoders:

- The **imaging scanning principle** for grating periods from 10 μm to approx. 70 μm .
- The **interferential scanning principle** for very fine graduations with grating periods of 4 μm .

Imaging scanning principle


Put simply, the imaging scanning principle functions by means of projected-light signal generation: two graduations with equal grating periods are moved relative to each other—the scale and the scanning reticle. The carrier material of the scanning reticle is transparent, whereas the graduation on the measuring standard may be applied to a transparent or reflective surface.

When parallel light passes through a grating, light and dark surfaces are projected at a certain distance. An index grating with the same grating period is located here. When the two gratings move relative to each other, the incident light is modulated. If the gaps in the gratings are aligned, light passes through. If the lines of one grating coincide with the gaps of the other, no light passes through.

Photovoltaic cells convert these variations in light intensity into electrical signals. The specially structured grating of the scanning reticle filters the light current to generate nearly sinusoidal output signals. The smaller the period of the grating structure is, the closer and more tightly tolerated the gap must be between the scanning reticle and circular scale. Practical mounting tolerances for encoders with the imaging scanning principle are achieved with grating periods of 10 μm and larger.

The RCN, RON and ROD angle encoders with integral bearing operate according to the imaging scanning principle.

Imaging scanning principle

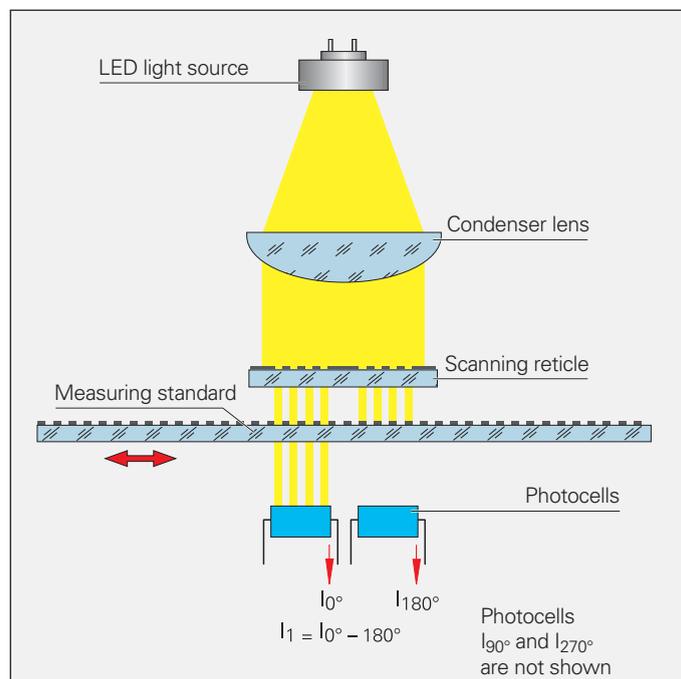

Interferential scanning principle

The interferential scanning principle exploits the diffraction and interference of light on a fine graduation to produce signals used to measure displacement.

A step grating is used as the measuring standard: reflective lines $0.2 \mu\text{m}$ high are applied to a flat, reflective surface. In front of that is the scanning reticle—a transparent phase grating with the same grating period as the scale.

When a light wave passes through the scanning reticle, it is diffracted into three partial waves of the orders -1 , 0 , and $+1$, with approximately equal luminous intensity. The waves are diffracted by the scale such that most of the luminous intensity is found in the reflected diffraction orders $+1$ and -1 . These partial waves meet again at the phase grating of the scanning reticle where they are diffracted again and interfere. This produces essentially three waves that leave the scanning reticle at different angles. Photovoltaic cells convert this alternating light intensity into electrical signals.


A relative motion of the scanning reticle to the scale causes the diffracted wave fronts to undergo a phase shift: when the grating moves by one period, the wave front of the first order is displaced by one wavelength in the positive direction, and the wavelength of diffraction order -1 is displaced by one wavelength in the negative direction. Since the two waves interfere with each other when exiting the grating, the waves are shifted relative to each other by two wavelengths. This results in two signal periods from the relative motion of just one grating period.

Interferential encoders function with average grating periods of $4 \mu\text{m}$ and finer. Their scanning signals are largely free of harmonics and can be highly interpolated. These encoders are therefore especially suited for high resolution and high accuracy. Even so, their generous mounting tolerances permit installation in a wide range of applications.

The RPN 886 angle encoder with integral bearing operates according to the interferential scanning principle.

Interferential scanning principle (optics schematics)

- C Grating period
- Ψ Phase shift of the light wave when passing through the scanning reticle
- Ω Phase shift of the light wave due to motion X of the scale

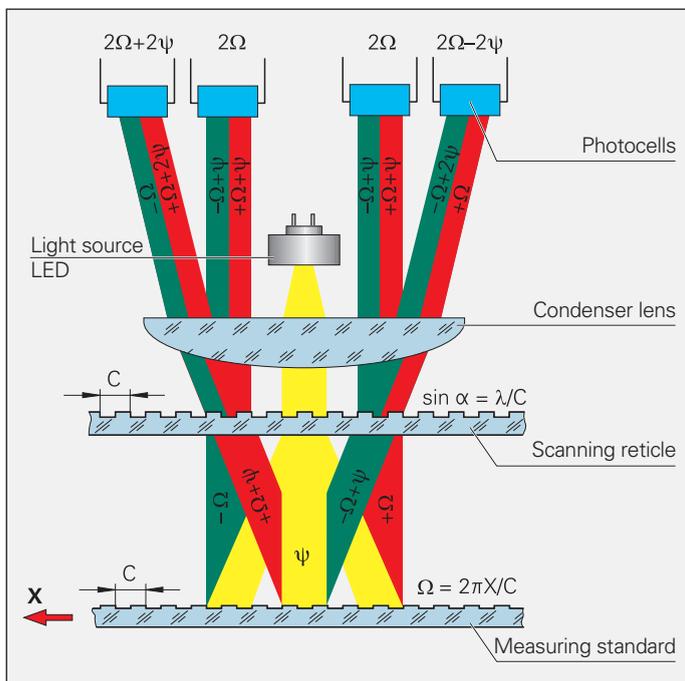

Measuring Accuracy

The accuracy of angular measurement is mainly determined by:

1. The quality of the graduation
2. The quality of the scanning process
3. The quality of the signal processing electronics
4. Eccentricity of the graduation to the bearing
5. Radial runout of the bearing
6. Elasticity of the encoder shaft and its coupling with the drive shaft
7. The elasticity of the stator coupling (RCN, RON, RPN) or shaft coupling (ROD)

In positioning tasks, the accuracy of the angular measurement determines the accuracy of the positioning of a rotary axis. The **system accuracy** given in the *Specifications* is defined as follows:

The extreme values of the total deviations of a position are—referenced to their mean value—within the system accuracy $\pm a$.

The total deviations are ascertained at a constant temperature (22 °C) during the final inspection, and are indicated on the calibration chart.

- For angle encoders with integral bearing and integrated stator coupling, this value also includes the deviation due to the shaft coupling.

- For angle encoders with integral bearing and separate shaft coupling, the angle error of the coupling must be added (see *Mechanical Design Types and Mounting — ROD*).
- For angle encoders without integral bearing, additional deviations resulting from mounting, errors in the bearing of the drive shaft, and adjustment of the scanning head must be expected (see the *Angle Encoders without Integral Bearing* brochure). These deviations are not reflected in the system accuracy.

The system accuracy reflects position errors within one revolution as well as those within one signal period.

Position errors within one revolution

become apparent in larger angular motions.

Position errors within one signal period

already become apparent in very small angular motions and in repeated measurements. They especially lead to speed ripples in the speed control loop.

These errors within one signal period are caused by the quality of the sinusoidal scanning signals and their subdivision.

The following factors influence the result:


- The size of the signal period,
- The homogeneity and edge definition of the graduation,
- The quality of the optical filter structures on the scanning reticle,
- The characteristics of the photoelectric detectors, and
- The stability and dynamics during the further processing of the analog signals.

HEIDENHAIN angle encoders take these factors of influence into account, and permit interpolation of the sinusoidal output signal with subdivision accuracies of better than $\pm 1\%$ of the signal period (RPN: $\pm 1.5\%$). The reproducibility is even better, meaning that useful electric subdivision factors and small signal periods permit small enough measuring steps (see *Specifications*).

Example:

Angle encoder with 36 000 sinusoidal signal periods per revolution

One signal period corresponds to 0.01° or $36''$. At a signal quality of $\pm 1\%$, this results in maximum position errors within one signal period of approx. $\pm 0.0001^\circ$ or $\pm 0.36''$.

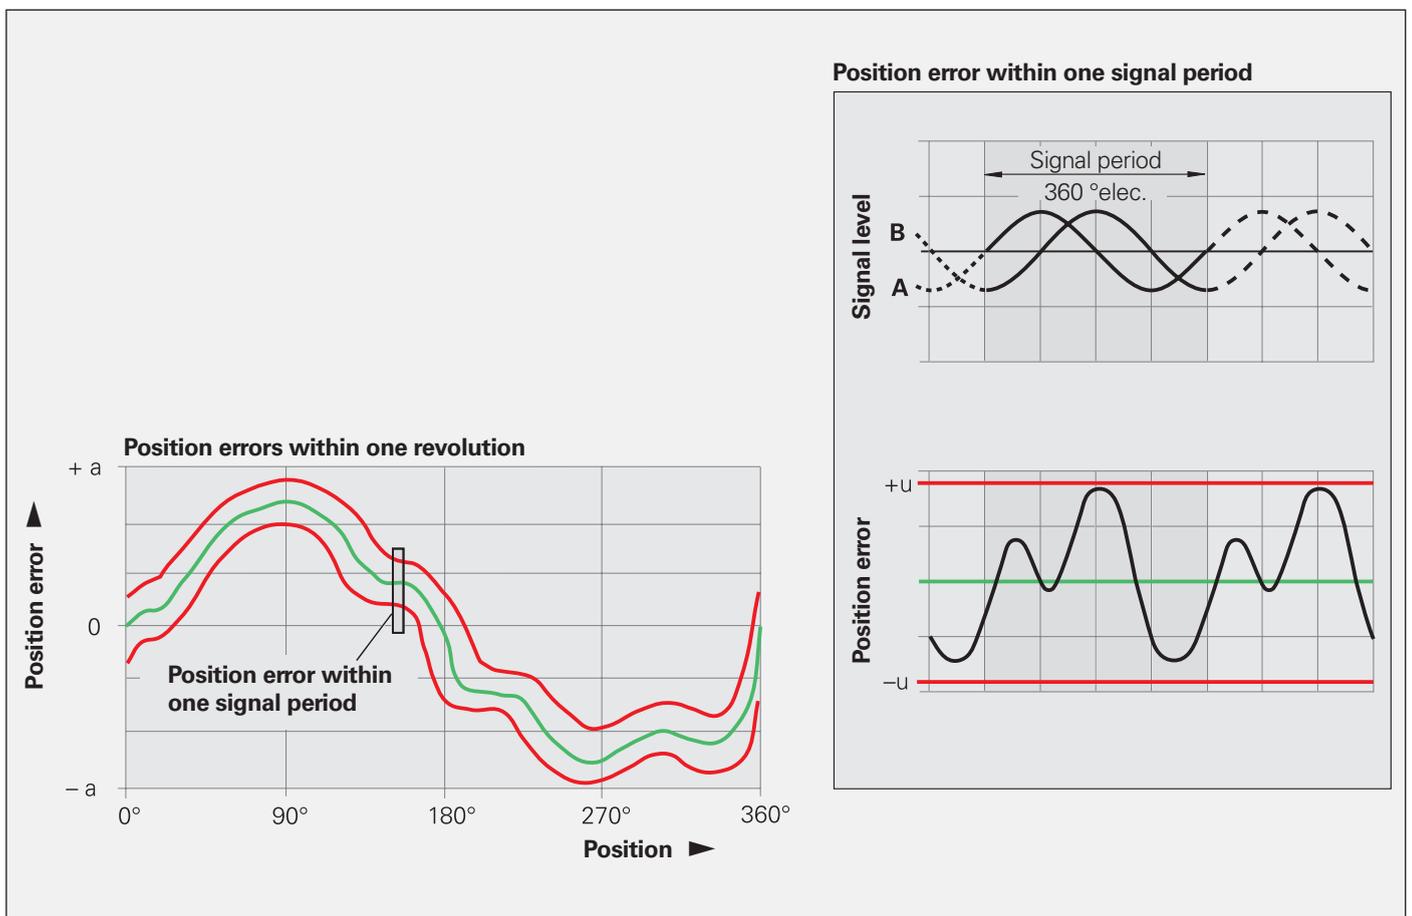

For its angle encoders with integral bearings, HEIDENHAIN prepares individual calibration charts and ships them with the encoder.

The calibration chart documents the encoder's accuracy and serves as a traceability record to a calibration standard. For the RCN, RON and RPN, which feature an integrated coupling, the accuracy specifications already include the error of the coupling. For angle encoders with separate shaft coupling, however, the error caused by the coupling is not included in the encoder specification and must be added to calculate the total error (see *Kinematic error of transfer under Mechanical Design Types and Mounting – ROD*).

The accuracy of angle encoders is ascertained through five forward and five backward measurements. The measuring positions per revolution are chosen to determine very exactly not only the long-range error, but also the position error within one signal period.

Calibration chart example: RON 285

- 1 Graphic representation of error
 - Envelope curve —
 - Mean value curve —
- 2 Results of calibration

All measured values determined in this manner lie within or on the graphically depicted **envelope curve**. The **mean value curve** shows the arithmetic mean of the measured values, whereby the reversal error is not included.


The **reversal error** depends on the shaft coupling. On angle encoders with integral stator coupling it is determined at ten measuring positions in forward and backward steps. The maximum value and arithmetic mean are documented on the calibration chart.

The following limits apply to the reversal error:

- RCN/RON 2xx:** Max. 0.6"
- RCN/RON 7xx:** Max. 0.4"
- RCN/RON/RPN 8xx:** Max. 0.4"

The **manufacturer's inspection certificate** certifies the accuracy of the encoder. The **calibration standard** is indicated in order to certify the traceability to the national standard.

Determination of the reversal error with forward and backward measurements

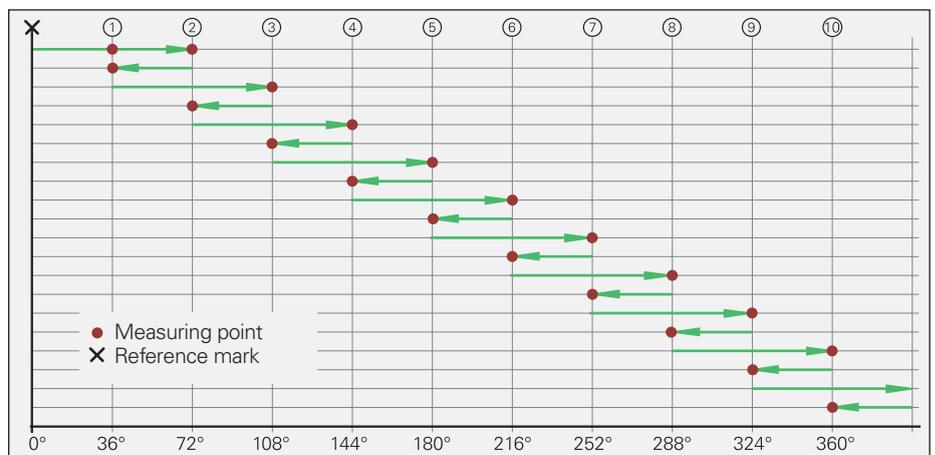

HEIDENHAIN		Messprotokoll Calibration Chart		RON 285 18000
				Id.Nr.: 358 699-07 S.Nr.: 12 211 342
Strichzahl / Line count: 18000	Umkehrspanne / Mechanical hysteresis	Unsicherheit der Messmaschine / Uncertainty of measuring machine: 0.05"		
Positionsabweichung / Position error	Mittelwert / Mean value: 0.22 "	Messgeschwindigkeit / Measuring velocity: 6.66 min ⁻¹		
Mittelwert / Mean value: ± 1.57 "	Maximum / Maximum: 0.34 "	Bezugstemperatur / Reference temperature: 22 °C		
In einer Signalperiode / Within signal period: ± 0.47 "		— 2		

Die Messkurve zeigt Mittelwerte und Extremwerte der Positionsabweichung aus 5 Vor- und Rückwärtsmessungen ohne Umkehrspanne.
Positionsabweichung $\Delta\varphi$ des Messgerätes: $\Delta\varphi = \varphi_S - \varphi_M$
(φ_S = Messposition des Vergleichsnormals, φ_M = Messposition des Prüflings)
Anzahl der Messpositionen pro Umdrehung: **2560**
Die Umkehrspanne wird an 10 Messpositionen im Schrittzyklus ermittelt.

The error curve shows the mean and extreme values of the position error from five measurements in forward and backward direction without mechanical hysteresis.
Position error $\Delta\varphi$ of the encoder: $\Delta\varphi = \varphi_S - \varphi_M$
(φ_S = position measured by the reference standard, φ_M = position measured by the measured encoder)
Number of measurement positions per revolution: **2560**
The mechanical hysteresis is determined at 10 measurement positions in a step cycle.

Hersteller-Prüfzertifikat (DIN 55 350-18-4.2.2)
Dieses Gerät wurde unter strengen HEIDENHAIN-Qualitätsnormen hergestellt und geprüft.
Die Positionsabweichung liegt innerhalb der Genauigkeitsklasse ± 5 ".

Manufacturer's Inspection Certificate (DIN 55 350-18-4.2.2)
This unit has been manufactured and inspected in accordance with the stringent quality standards of HEIDENHAIN.
The position error lies within the accuracy grade ± 5 ".

Kalibriernormal ERP 880 TK	Calibration standard ERP 880 TK	Prüfer / Inspected by BARTLECHNER A. 19.05.2005
Kalibrierzeichen 50-DKD-K-12901	Calibration number 50-DKD-K-12901	
Kalibrierdatum 02-03	Calibration date 02-03	

Mechanical Design Types and Mounting

RCN, RON, RPN

RCN, RON and **RPN** angle encoders have an integral bearing, hollow shaft and integrated stator coupling. The measured shaft is directly connected with the shaft of the angle encoder. The reference mark can be assigned to a desired angular position of the measured shaft from the rear of the encoder during mounting.

The graduated disk is rigidly affixed to the hollow shaft. The scanning unit rides on the shaft on ball bearings and is connected to the housing with a coupling on the stator side. During angular acceleration of the shaft, the coupling must absorb only that torque caused by friction in the bearing. Angle encoders with integrated stator coupling therefore provide excellent dynamic performance.

Mounting

The housing of the RCN, RON and RPN is firmly connected to the stationary machine part with an integral mounting flange and a centering collar. Liquids can easily flow away through drainage channels on the flange.

Shaft coupling with ring nut

The RCN, RON and RPN series have a hollow through shaft. For installation, the hollow through shaft of the angle encoder is placed over the machine shaft, and is fixed with a ring nut from the front of the encoder. The ring nut can easily be tightened with the mounting tool.


RON 905 shaft coupling

The RON 905 has a bottomed hollow shaft. The shaft connection is made via an axial central screw.


Front end shaft coupling

It is often advantageous, especially with rotary tables, to integrate the angle encoder in the table so that it is freely accessible when the rotor is lifted. This installation from above reduces mounting times, increases the ease for servicing, and improves the accuracy, since the encoder is located nearer to the rotary table bearing and the measuring or machining plane. The hollow shaft is attached with the threaded holes on the face, using special mounting elements fitted to the individual design (not included in delivery).


To comply with radial and axial runout specifications, the internal bore ① and the shoulder surface ② are to be used as mounting surfaces for shaft coupling at the face of the encoder.

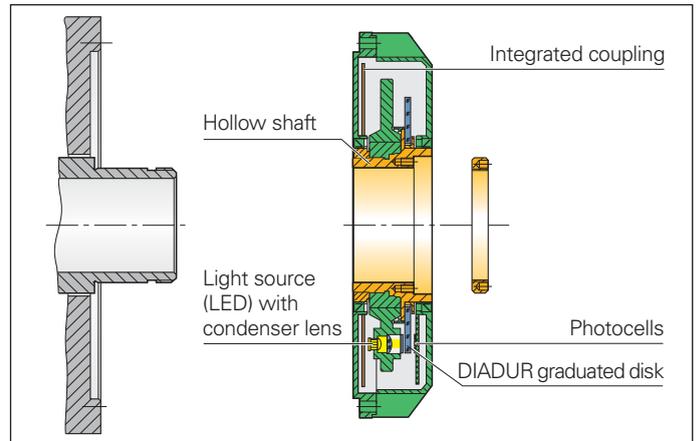

Cross section of the **RON 886** angle encoder

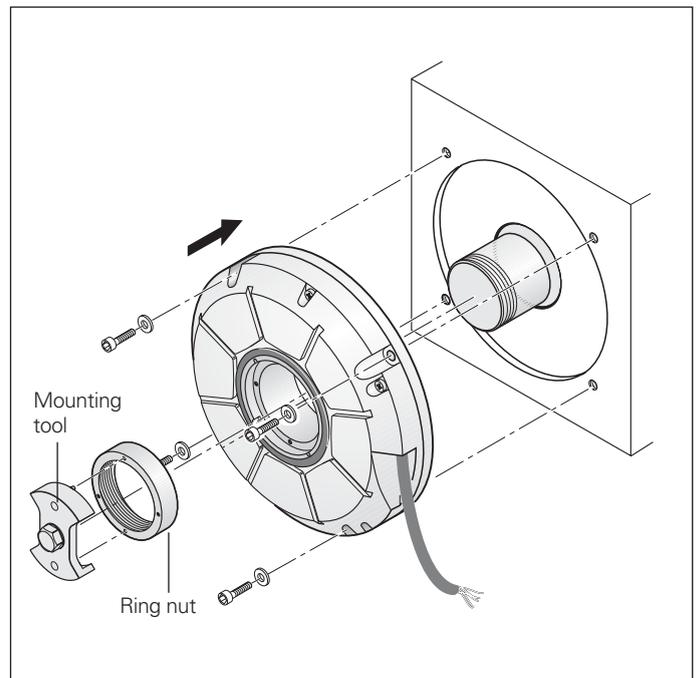

Mounting an angle encoder with hollow through shaft

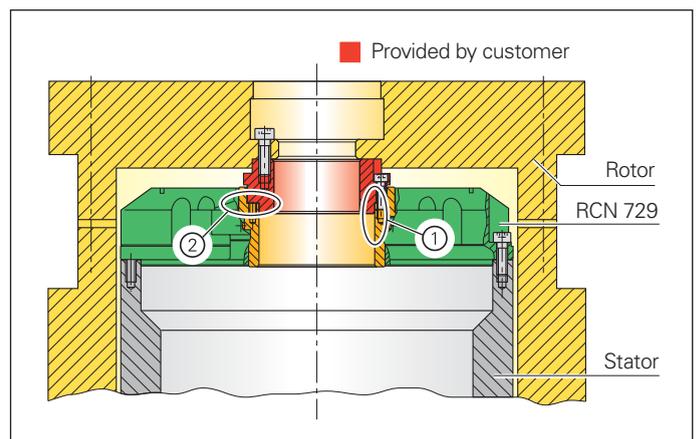

Front-end shaft coupling with **RCN 729**

Ring nuts for RCN, RON and RPN

HEIDENHAIN offers special ring nuts for the RCN, RON and RPN angle encoders with integral bearing and hollow through shaft with integrated coupling. Choose the tolerance of the shaft thread such that the ring nut can be tightened easily, with a minor axial play. This guarantees that the load is evenly distributed on the shaft connection, and prevents distortion of the encoder's hollow shaft.



Ring nut for RON/RCN 200

Hollow shaft \varnothing 20 mm: ID 336669-03

Ring nut for RON 785

Hollow shaft \varnothing 50 mm: ID 336669-05

Ring nut for RON 786; RON/RPN 886 RCN 72x/RCN 82x

Hollow shaft \varnothing 60 mm: ID 336669-01

Ring nut for RCN 72x/RCN 82x

Hollow shaft \varnothing 100 mm: ID 336669-06

Mounting tool for HEIDENHAIN ring nuts

The mounting tool is used to tighten the ring nut. Its pins lock into the bore holes in the ring nuts. A torque wrench provides the necessary tightening torque.

Mounting tool for ring nuts with

Hollow shaft \varnothing 20 mm ID 530334-03

Hollow shaft \varnothing 50 mm ID 530334-05

Hollow shaft \varnothing 60 mm ID 530334-01

Hollow shaft \varnothing 100 mm ID 530334-06

PWW inspection tool for angle encoders

The PWW makes a simple and quick inspection of the most significant mating dimensions possible. The integrated measuring equipment measures position and radial runout regardless of the type of shaft coupling, for example.

PWW for


Hollow shaft \varnothing 20 mm: ID 516211-01

Hollow shaft \varnothing 50 mm: ID 516211-02


Hollow shaft \varnothing 60 mm: ID 516211-03

Hollow shaft \varnothing 100 mm: ID 516211-05

Ring nut for
RxN 200 series

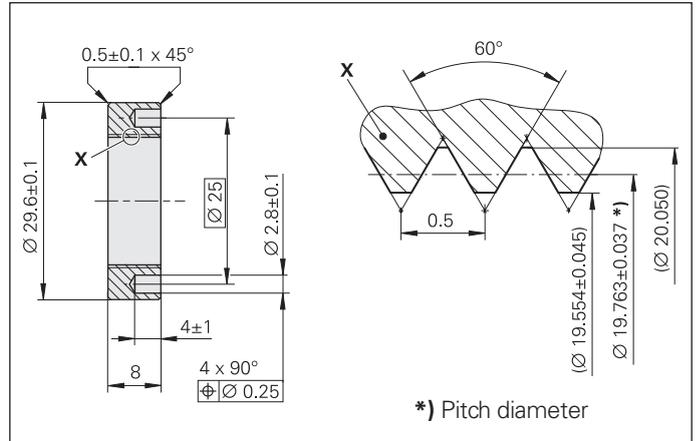

Ring nut for
RxN 700 / 800
series

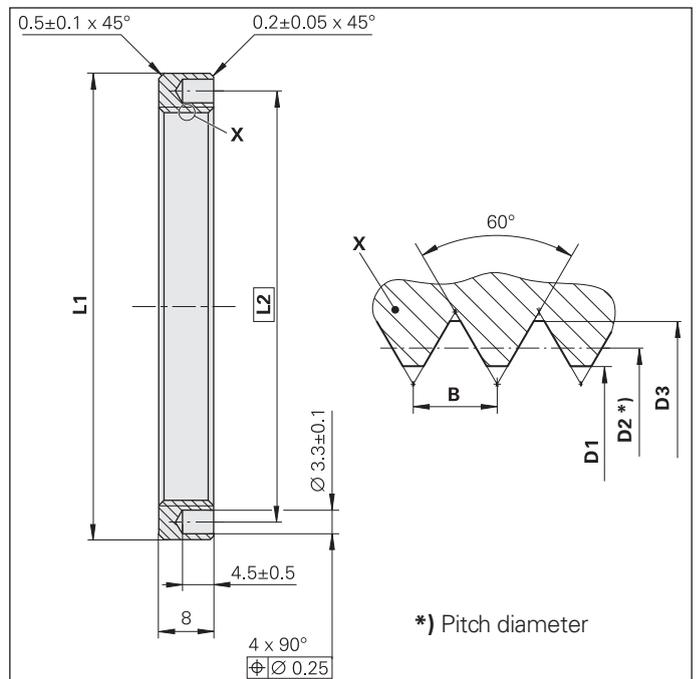

Ring nut for	L1	L2	D1	D2	D3	B
Hollow shaft \varnothing 50	\varnothing 62±0.2	\varnothing 55	(\varnothing 49.052 ±0.075)	\varnothing 49.469 ±0.059	(\varnothing 50.06)	1
Hollow shaft \varnothing 60	\varnothing 70±0.2	\varnothing 65	(\varnothing 59.052 ±0.075)	\varnothing 59.469 ±0.059	(\varnothing 60.06)	1
Hollow shaft \varnothing 100	\varnothing 114±0.2	\varnothing 107	(\varnothing 98.538 ±0.095)	(\varnothing 99.163 ±0.07)	(\varnothing 100.067)	1.5



PWW
inspection tool

Mechanical Design Types and Mounting

ROD


Angle encoders of the **ROD** product family require a separate coupling for connection to the drive shaft. The shaft coupling compensates axial movement and misalignment between the shafts, preventing excessive load on the bearing of the angle encoder. It is important that the encoder shaft and the drive shaft be optimally aligned for high measurement accuracies to be realized. The HEIDENHAIN product program includes diaphragm couplings and flat couplings designed for connecting the shaft of the ROD angle encoder to the drive shaft.

Mounting


ROD angle encoders are provided with an integral mounting flange with centering collar. The encoder shaft is connected to the drive shaft by way of a diaphragm coupling or flat coupling.

Shaft couplings


The shaft coupling compensates axial movement and misalignment between the encoder shaft and the drive shaft, preventing excessive load on the encoder bearing of the angle encoder.

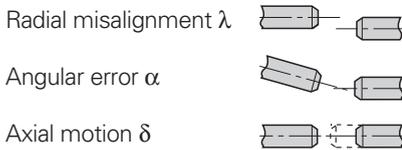

Mounting example
ROD 880

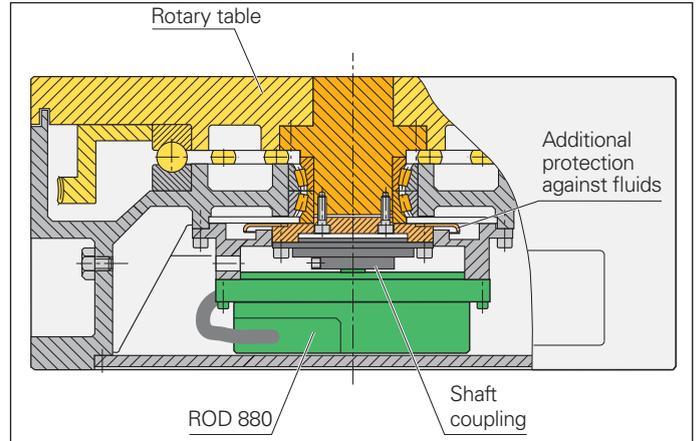


Mounting an
ROD

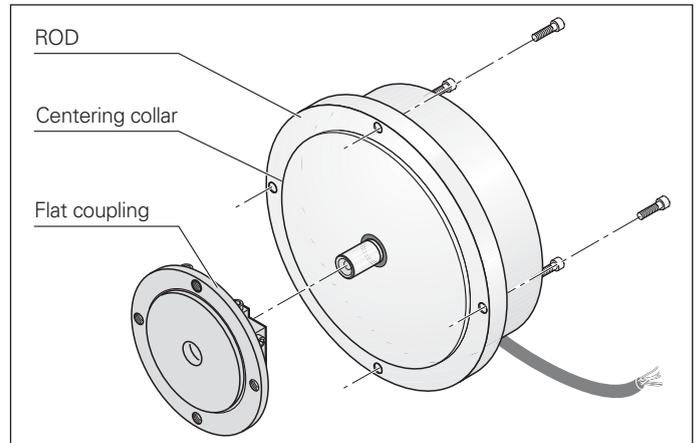


Shaft coupling	ROD 200 series		ROD 700 series, ROD 800 series		
	K 03 Diaphragm coupling	K 18 Flat coupling	K 01 Diaphragm coupling	K 15 Flat coupling	K 16 Flat coupling
Hub bore	10 mm		14 mm		
Kinematic transfer error	$\pm 2''$ at $\lambda \leq 0.1$ mm and $\alpha \leq 0.09^\circ$		$\pm 1''$	$\pm 0.5''$ at $\lambda \leq 0.05$ mm and $\alpha \leq 0.03^\circ$	
Torsional rigidity	1500 Nm/rad	1200 Nm/rad	4000 Nm/rad	6000 Nm/rad	4000 Nm/rad
Permissible torque	0.2 Nm	0.5 Nm			
Perm. radial offset λ	≤ 0.3 mm				
Perm. angular error α	$\leq 0.5^\circ$			$\leq 0.2^\circ$	$\leq 0.5^\circ$
Perm. axial offset δ	≤ 0.2 mm			≤ 0.1 mm	≤ 1 mm
Moment of inertia (approx.)	$20 \cdot 10^{-6}$ kgm ²	$75 \cdot 10^{-6}$ kgm ²	$200 \cdot 10^{-6}$ kgm ²		$400 \cdot 10^{-6}$ kgm ²
Permissible speed	10000 rpm	1000 rpm	3000 rpm	1000 rpm	
Torque for locking screws (approx.)	1.2 Nm		2.5 Nm	1.2 Nm	
Weight	100 g	117 g	180 g	250 g	410 g


K 03 diaphragm coupling
ID 200313-04

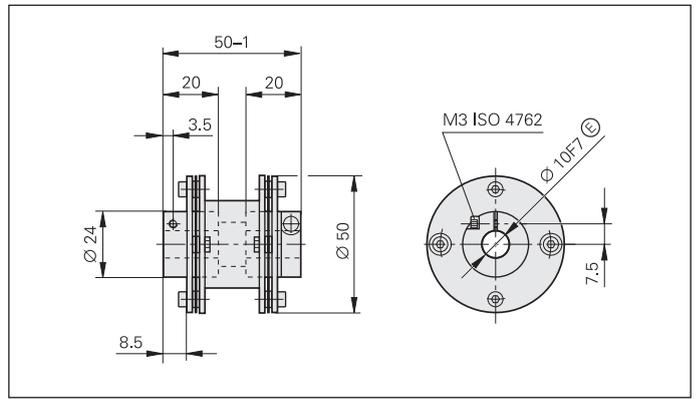


K 18 flat coupling
ID 202227-01

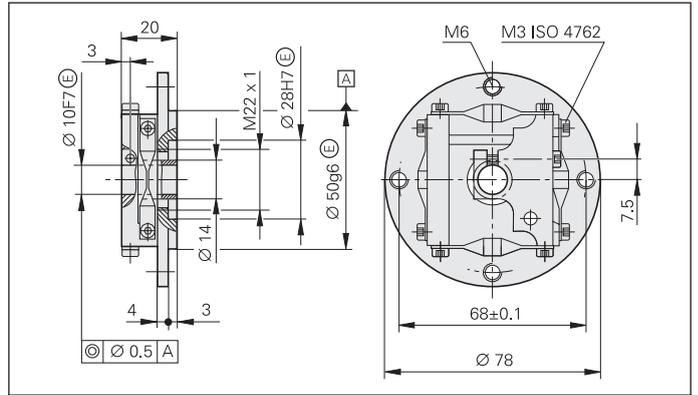


K 01 diaphragm coupling
ID 200301-02

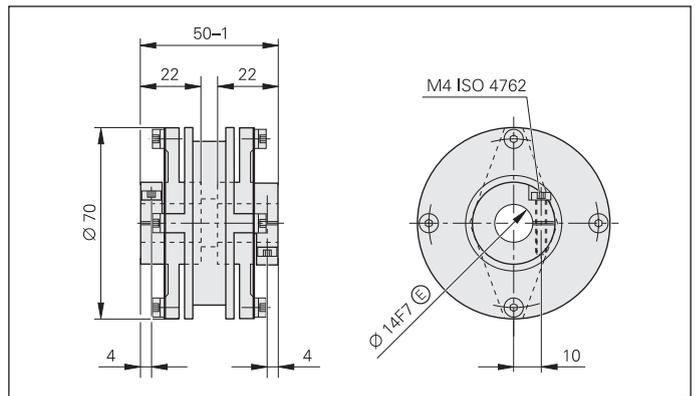

K 15 flat coupling
ID 255797-01

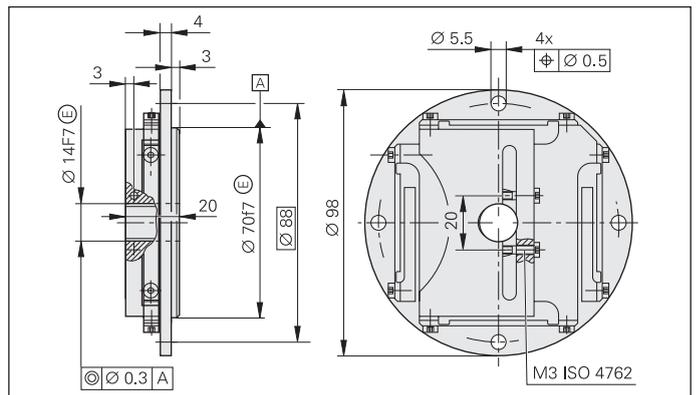

K 16 flat coupling
ID 258878-01

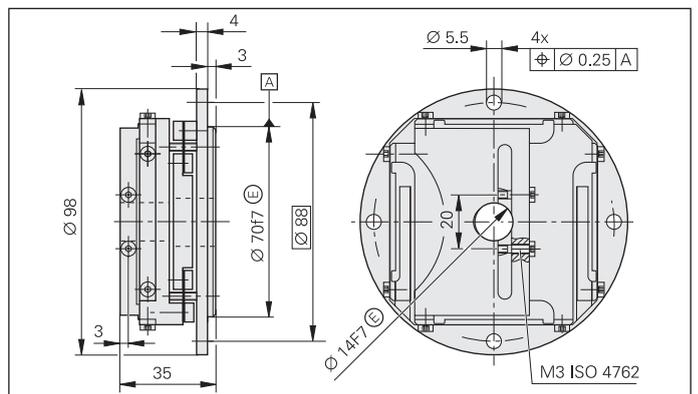

Dimensions in mm



Tolerancing ISO 8015
ISO 2768 - m H

General Mechanical Information

Protection

Unless otherwise indicated, all RCN, RON, RPN and ROD angle encoders meet protection standard IP 67 according to IEC 60529. This includes housings and cable outlets. The **shaft inlet** provides protection to IP 64.

Splash water should not contain any substances that would have harmful effects on the encoder parts. If protection to IP 64 of the shaft inlet is not sufficient (such as when the angle encoder is mounted vertically), additional labyrinth seals should be provided.

RCN, RON, RPN and ROD angle encoders are equipped with a compressed air inlet. Connection to a source of compressed air slightly above atmospheric pressure provides additional protection against contamination.

The compressed air introduced directly onto the encoders must be cleaned by a microfilter and must comply with the following quality classes as per **ISO 8573-1 (2001 Edition)**:

- Solid contaminant: Class 1 (max. particle size 0.1 μm and max. particle density 0.1 mg/m^3 at $1 \cdot 10^5$ Pa)
- Total oil content: Class 1 (max. oil concentration 0.01 mg/m^3 at $1 \cdot 10^5$ Pa)
- Maximum pressure dew point: Class 4, but with reference conditions of +3 °C at $2 \cdot 10^5$ Pa

For this purpose, HEIDENHAIN offers the **DA 300 compressed air unit** (filter combination with pressure regulator and fittings). The compressed air introduced into the encoder must fulfill the requirements of the following quality classes as per ISO 8573-1 (2001 Edition):

- Max. particle size and density of solid contaminants:
Class 4 (max. particle size: 15 μm , max. particle density: 8 mg/m^3)
- Total oil content:
Class 4 (oil content: 5 mg/m^3)
- Max. pressure dew point:
(+29 °C at $10 \cdot 10^5$ Pa)
No classification


The following components are necessary for connection to the RCN, RON, RPN and ROD angle encoders:

M5 connecting piece for RCN/RON/RPN/ROD

with gasket and throttle \varnothing 0.3 mm for air-flow rate from 1 to 4 l/min ID 207835-04

M5 coupling joint, swiveling

with seal ID 207834-02

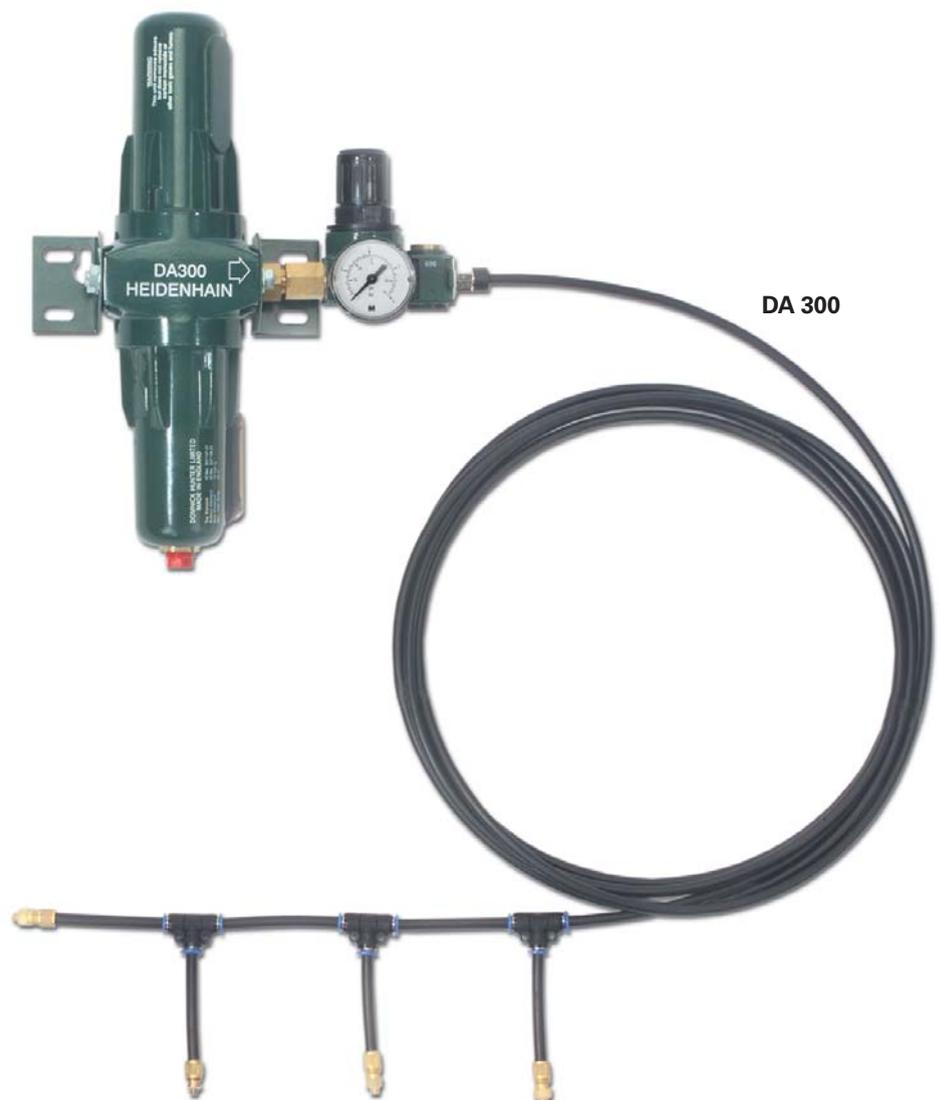

For more information, ask for our *DA 300* product information sheet.

Temperature range

The angle encoders are inspected at a **reference temperature** of 22 °C. The system accuracy given in the calibration chart applies at this temperature.

The **operating temperature** indicates the ambient temperature limits between which the angle encoders will function properly.

The **storage temperature range** of –30 °C to +80 °C is valid when the unit remains in its packaging. The storage temperature for the RON 905 may not exceed –30 °C to +50 °C.

Protection against contact

After encoder installation, all rotating parts (coupling on ROD, locking ring on RCN, RON and RPN) must be protected against accidental contact during operation.

Acceleration

Angle encoders are subject to various types of acceleration during operation and mounting.

- The **permissible angular acceleration** for all RCN, RON, RPN and ROD angle encoders is over 10^5 rad/s^2 .
- The indicated maximum values for **vibration** are valid according to IEC 60068-2-6.
- The maximum permissible acceleration values (semi-sinusoidal shock) for **shock and impact** are valid for 6 ms (IEC 60068-2-27).

Under no circumstances should a hammer or similar implement be used to adjust or position the encoder.

Natural frequency f_N of coupling

The rotor and shaft coupling of the ROD angle encoders, as well as the stator and stator coupling of the RCN, RON and RPN angle encoders, form a single vibrating spring-mass system.

The **natural frequency f_N** should be as high as possible. For RCN, RON and RPN angle encoders, the frequency ranges given in the respective specifications are those where the natural frequencies of the encoders do not cause any significant position deviations in the measuring direction. A prerequisite for the highest possible natural frequency on **ROD angle encoders** is the use of a **shaft coupling** with a high torsional rigidity C .

$$f_N = \frac{1}{2 \cdot \pi} \cdot \sqrt{\frac{C}{I}}$$

f_N : Natural frequency in Hz

C : Torsional rigidity of the coupling in Nm/rad

I : Moment of inertia of the rotor in kgm^2

If radial and/or axial acceleration occurs during operation, the effect of the rigidity of the encoder bearing, the encoder stator and the coupling are also significant. If such loads occur in your application, HEIDENHAIN recommends consulting with the main facility in Traunreut.

Expendable parts

HEIDENHAIN encoders contain components that are subject to wear, depending on the application and manipulation. These include in particular the following parts:

- LED light source
 - Cables with frequent flexing
- Additionally for encoders with integral bearing:
- Bearings
 - Shaft sealing rings for rotary and angular encoders
 - Sealing lips for sealed linear encoders

System tests

Encoders from HEIDENHAIN are usually integrated as components in larger systems. Such applications require **comprehensive tests of the entire system** regardless of the specifications of the encoder.

The specifications given in the brochure apply to the specific encoder, not to the complete system. Any operation of the encoder outside of the specified range or for any other than the intended applications is at the user's own risk. In safety-oriented systems, the higher-level system must verify the position value of the encoder after switch-on.

Mounting

Work steps to be performed and dimensions to be maintained during mounting are specified solely in the mounting instructions supplied with the unit. All data in this catalog regarding mounting are therefore provisional and not binding; they do not become terms of a contract.

	Absolute			
	RCN 228 RCN 226		RCN 227F RCN 223F	RCN 227M RCN 223M
Absolute position values	EnDat 2.2	EnDat 2.2	Fanuc serial interface	Mitsubishi high-speed serial interface
Ordering designation*	EnDat 22	EnDat 02	Fanuc 02	Mit 02-4
Positions per revolution	RCN 228: 268 435 456 (28 bits) RCN 226: 67 108 864 (26 bits)		RCN 227: 134 217 728 (27 bits) RCN 223: 8 388 608 (23 bits)	
Elec. permissible speed	≤ 1500 rpm			
Clock frequency	≤ 8 MHz	≤ 2 MHz	–	
Calculation time t_{cal}	5 μ s		–	
Incremental signals	–	 1 V _{PP}	–	
Line count	–	16 384	–	
Cutoff frequency –3 dB	–	≥ 180 kHz	–	
Recommended meas. step for position capture	0.0001°			
System accuracy*	RCN 228: ± 2.5" RCN 226: ± 5"		RCN 227F: ± 2.5" RCN 223F: ± 5"	RCN 227M: ± 2.5" RCN 223M: ± 5"
Power supply without load	3.6 V to 5.25 V at encoder/max. 350 mA			
Electrical connection	Cable 1 m, with M12 coupling	Cable 1 m, with M23 coupling	Cable 1 m, with M23 coupling	
Max. cable length¹⁾	150 m		30 m	
Shaft	Hollow through shaft D= 20 mm			
Mech. permissible speed	≤ 3000 rpm			
Starting torque	≤ 0.08 Nm at 20 °C			
Moment of inertia of rotor	73 · 10 ⁻⁶ kgm ²			
Natural frequency	≥ 1200 Hz			
Permissible axial motion of measured shaft	± 0.1 mm			
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60068-2-6) ≤ 1000 m/s ² (IEC 60068-2-27)			
Operating temperature	For accuracy of ± 2.5": 0 to 50 °C For accuracy of ± 5": Moving cable –10 to 70 °C Stationary cable –20 to 70 °C			
Protection IEC 60 529	IP 64			
Weight	Approx. 0.8 kg			

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable

	Incremental				
	RON 225	RON 275	RON 275	RON 285	RON 287
Incremental signals	 TTL x 2	 TTL x 5	 TTL x 10	 1 V _{PP}	
Line count Integrated interpolation* Output signals/rev.	9000 2-fold 18000	18000 5-fold 90000	18000 10-fold 180000	18000	
Reference mark*	One			RON 2xx: One RON 2xx C: Distance-coded	
Cutoff frequency –3 dB Output frequency Edge separation a	– ≤ 1 MHz ≥ 0.125 μs	– ≤ 250 kHz ≥ 0.96 μs	– ≤ 1 MHz ≥ 0.22 μs	≥ 180 kHz –	
Elec. permissible speed	–	≤ 166 rpm	≤ 333 rpm	–	
Recommended meas. step for position capture	0.005°	0.001°	0.0005°	0.0001°	
System accuracy	± 5"				± 2.5"
Power supply without load	5 V ±10% max. 150 mA				
Electrical connection*	Cable 1 m, with or without M23 coupling				
Max. cable length ¹⁾	50 m			150 m	
Shaft	Hollow through shaft D= 20 mm				
Mech. permissible speed	≤ 3000 rpm				
Starting torque	≤ 0.08 Nm at 20 °C				
Moment of inertia of rotor	73 · 10 ⁻⁶ kgm ²				
Natural frequency	≥ 1200 Hz				
Permissible axial motion of measured shaft	± 0.1 mm				
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60068-2-6) ≤ 1000 m/s ² (IEC 60068-2-27)				
Operating temperature	Moving cable: –10 to 70 °C Stationary cable: –20 to 70 °C				0 to 50 °C
Protection IEC 60529	IP 64				
Weight	Approx. 0.8 kg				

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable





RON 785

- Integrated stator coupling
- Hollow through shaft, diameter 50 mm
- System accuracy $\pm 2''$

Dimensions in mm



Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm

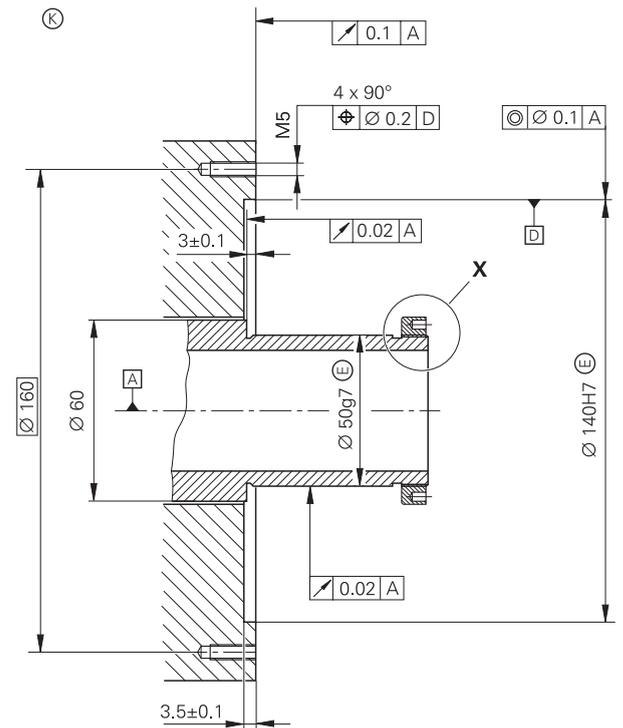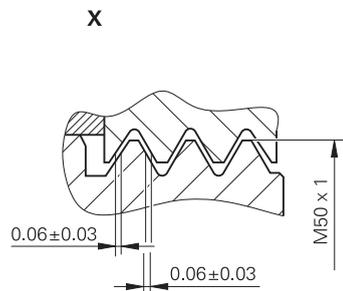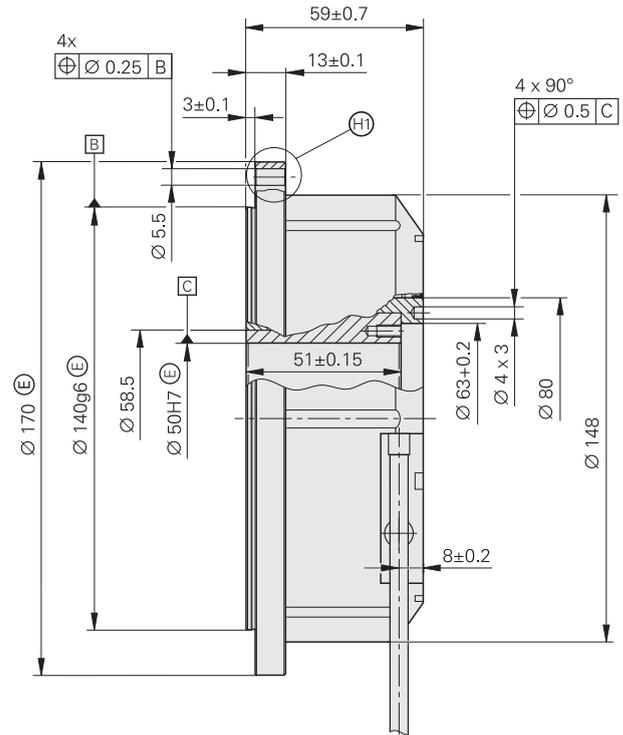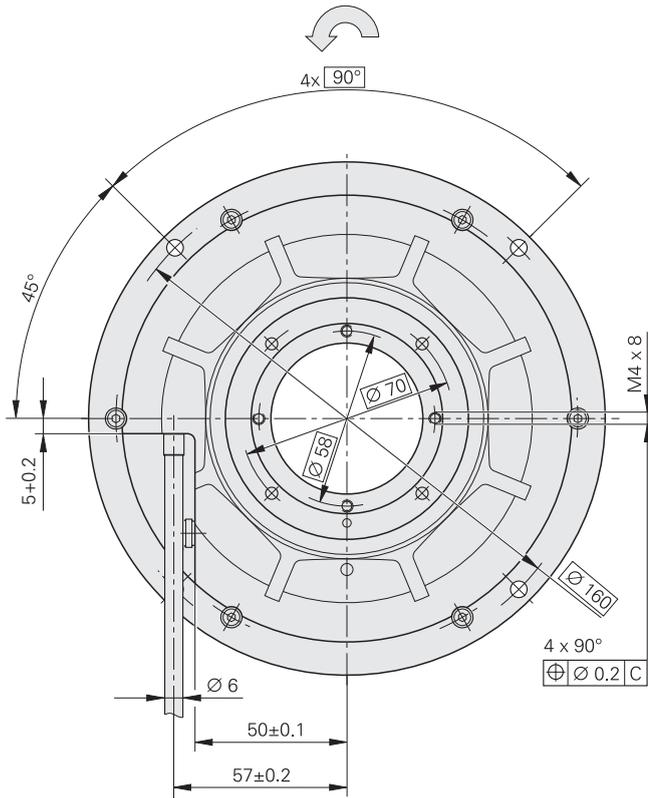

Cable radial, also usable axially

⊠ = Bearing

⊕ = Required mating dimensions

⊕ = Shown rotated by 45°

↻ Direction of shaft rotation for output signals as per the interface description

	Incremental RON 785
Incremental signals	$\sim 1 V_{PP}$
Line count	18000
Reference mark*	<i>RON 785</i> : One <i>RON 785 C</i> : Distance-coded
Cutoff frequency -3 dB	≥ 180 kHz
Recommended meas. step for position capture	0.0001°
System accuracy	$\pm 2''$
Power supply without load	5 V $\pm 10\%$ max. 150 mA
Electrical connection*	Cable 1 m, with or without M23 coupling
Max. cable length ¹⁾	150 m
Shaft	Hollow through shaft D= 50 mm
Mech. permissible speed	≤ 1000 rpm
Starting torque	≤ 0.5 Nm at 20 °C
Moment of inertia of rotor	$1.05 \cdot 10^{-3}$ kgm ²
Natural frequency	≥ 1000 Hz
Permissible axial motion of measured shaft	± 0.1 mm
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60068-2-6) ≤ 1000 m/s ² (IEC 60068-2-27)
Operating temperature	0 to 50 °C
Protection IEC 60529	IP 64
Weight	Approx. 2.5 kg

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable

RCN 700/RCN 800 Series





- Integrated stator coupling
- Hollow through shaft, diameter 60 mm
- System accuracy $\pm 2''$ or $\pm 1''$



Dimensions in mm



Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm

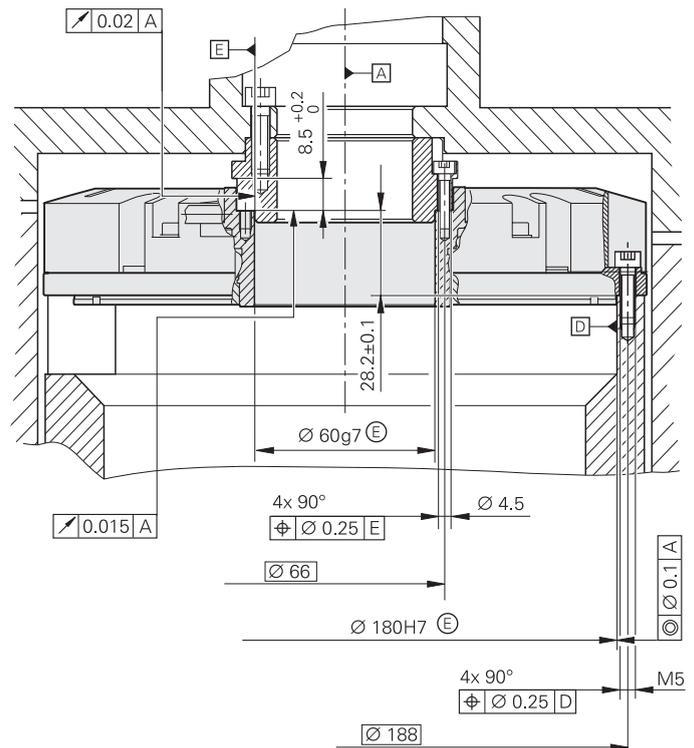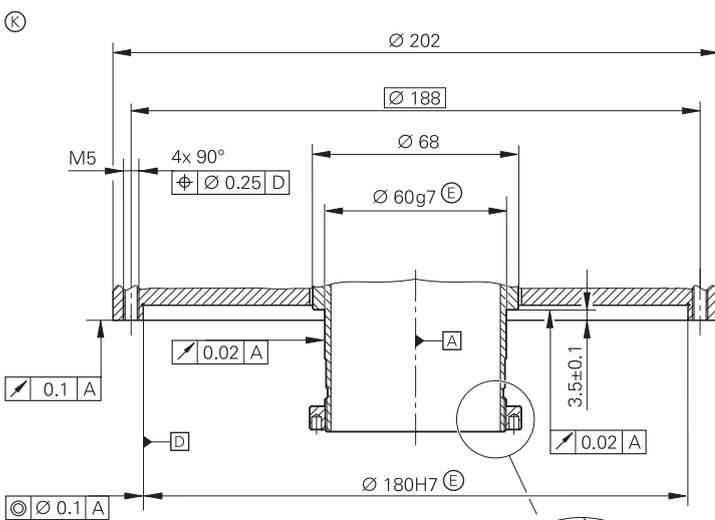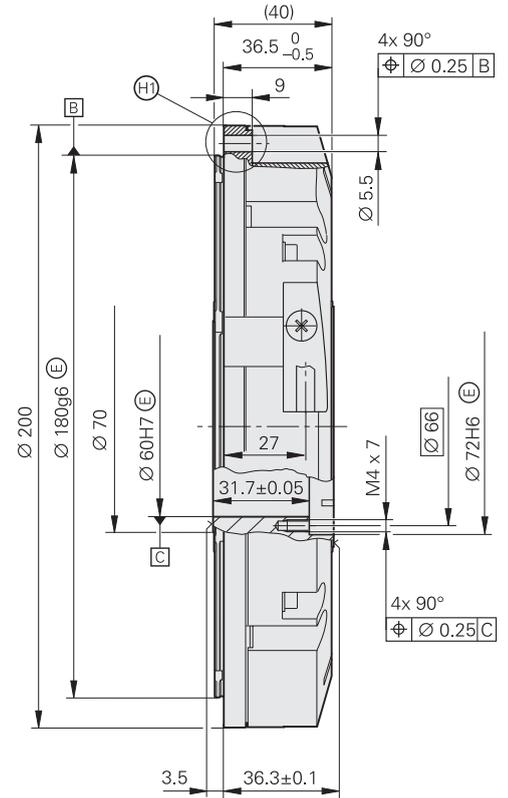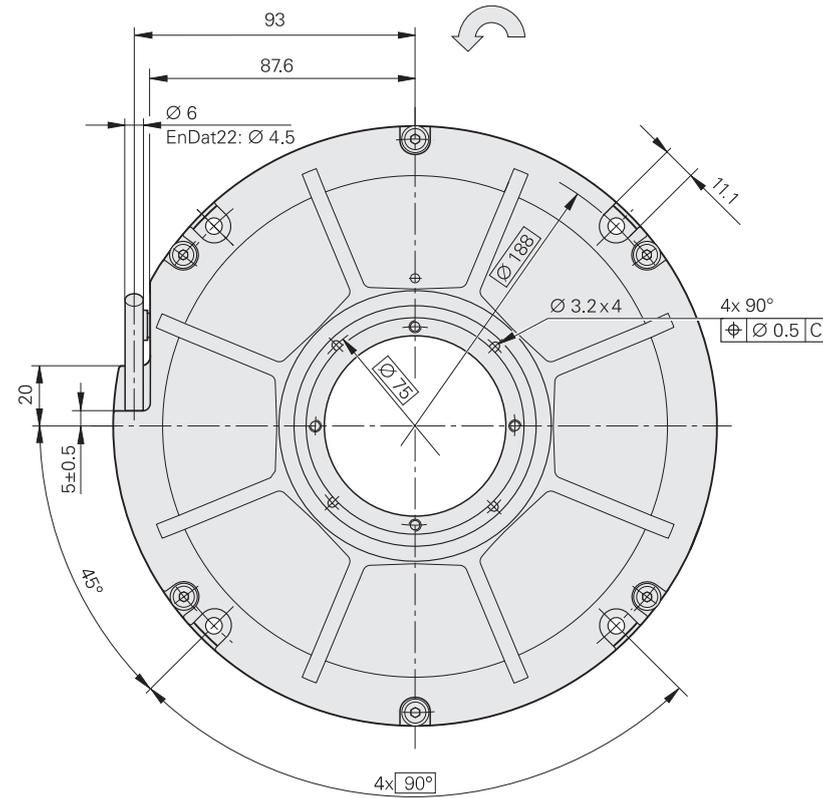


Cable radial, also usable axially

▣ = Bearing

⊙ = Required mating dimensions

⊕ = Shown rotated by 45°

↻ Direction of shaft rotation for output signals as per the interface description

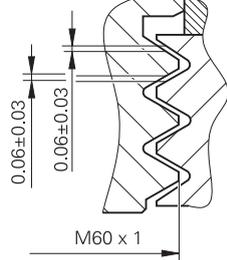

	Absolute			
	RCN 729 RCN 829	RCN 729 RCN 829	RCN 727F RCN 827F	RCN 727M RCN 827M
Absolute position values	EnDat 2.2	EnDat 2.2	Fanuc 02 serial interface	Mitsubishi high-speed serial interface
Ordering designation*	EnDat 22	EnDat 02	Fanuc 02	Mit 02-4
Positions per revolution	536870912 (29 bits)		134217728 (27 bits)	
Elec. permissible speed	≤ 300 rpm (for continuous position value)			
Clock frequency	≤ 8 MHz	≤ 2 MHz	–	
Calculation time t_{cal}	5 μs		–	
Incremental signals	–	 1 V _{PP}	–	
Line count*	–	32 768	–	
Cutoff frequency –3 dB	–	≥ 180 kHz	–	
Recommended meas. step for position capture	RCN 72x: 0.0001° RCN 82x: 0.00005°			
System accuracy	RCN 72x: ± 2" RCN 82x: ± 1"			
Power supply without load	3.6 to 5.25 V/Max. 350 mA			
Electrical connection*	Cable 1 m, with M12 coupling	Cable 1 m, with M23 coupling		
Max. cable length ¹⁾	150 m		30 m	
Shaft	Hollow through shaft D= 60 mm			
Mech. permissible speed	≤ 1000 rpm			
Starting torque	≤ 0.5 Nm at 20 °C			
Moment of inertia of rotor	1.3 · 10 ⁻³ kgm ²			
Natural frequency	≥ 1000 Hz			
Permissible axial motion of measured shaft	≤ ± 0.1 mm			
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60068-2-6) ≤ 1000 m/s ² (IEC 60068-2-27)			
Operating temperature	0 to 50 °C			
Protection IEC 60529	IP 64			
Weight	Approx. 2.8 kg			

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable

	Absolute			
	RCN 729 RCN 829	RCN 729 RCN 829	RCN 727F RCN 827F	RCN 727M RCN 827M
Absolute position values	EnDat 2.2	EnDat 2.2	Fanuc 02 serial interface	Mitsubishi high-speed serial interface
Ordering designation*	EnDat 22	EnDat 02	Fanuc 02	Mit 02-4
Positions per revolution	536870912 (29 bits)		134217728 (27 bits)	
Elec. permissible speed	≤ 300 rpm (for continuous position value)			
Clock frequency	≤ 8 MHz	≤ 2 MHz	–	
Calculation time t_{cal}	5 μs		–	
Incremental signals	–	 1 V _{PP}	–	
Line count*	–	32 768	–	
Cutoff frequency –3 dB	–	≥ 180 kHz	–	
Recommended meas. step for position capture	RCN 72x: 0.0001° RCN 82x: 0.00005°			
System accuracy	RCN 72x: ± 2" RCN 82x: ± 1"			
Power supply without load	3.6 to 5.25 V/Max. 350 mA			
Electrical connection*	Cable 1 m, with M12 coupling	Cable 1 m, with M23 coupling		
Max. cable length ¹⁾	150 m		30 m	
Shaft	Hollow through shaft D= 100 mm			
Mech. permissible speed	≤ 1000 rpm			
Starting torque	≤ 1.5 Nm at 20 °C			
Moment of inertia of rotor	3.3 · 10 ⁻³ kgm ²			
Natural frequency	≥ 900 Hz			
Permissible axial motion of measured shaft	≤ ± 0.1 mm			
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60068-2-6) ≤ 1000 m/s ² (IEC 60068-2-27)			
Operating temperature	0 to 50 °C			
Protection IEC 60529	IP 64			
Weight	Approx. 2.6 kg			

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable

RON 786/RON 886/RPN 886





- Integrated stator coupling
- Hollow through shaft, diameter 60 mm
- System accuracy $\pm 2''$ or $\pm 1''$



Dimensions in mm



Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm

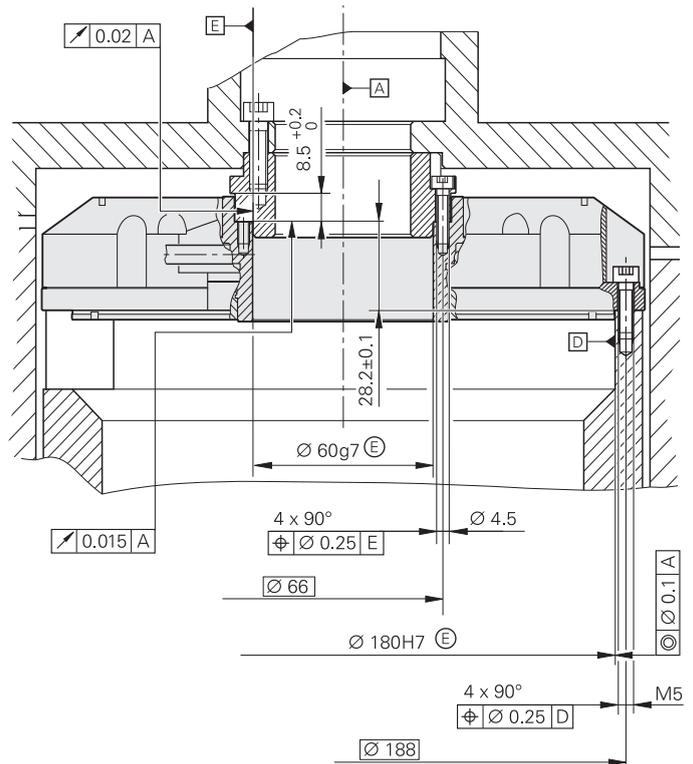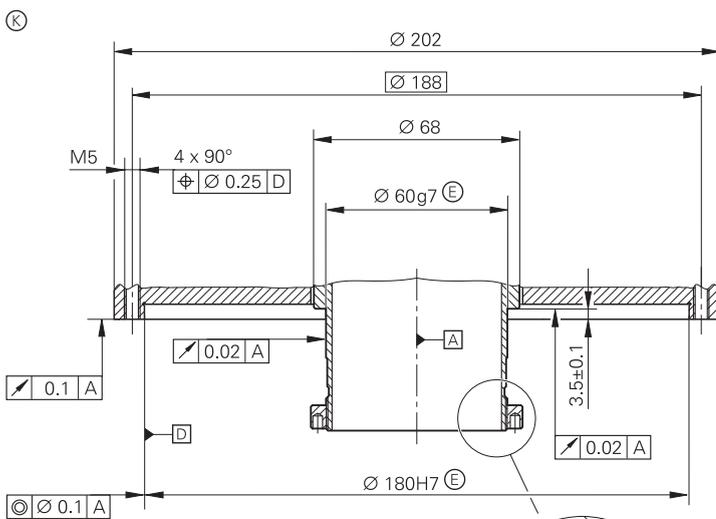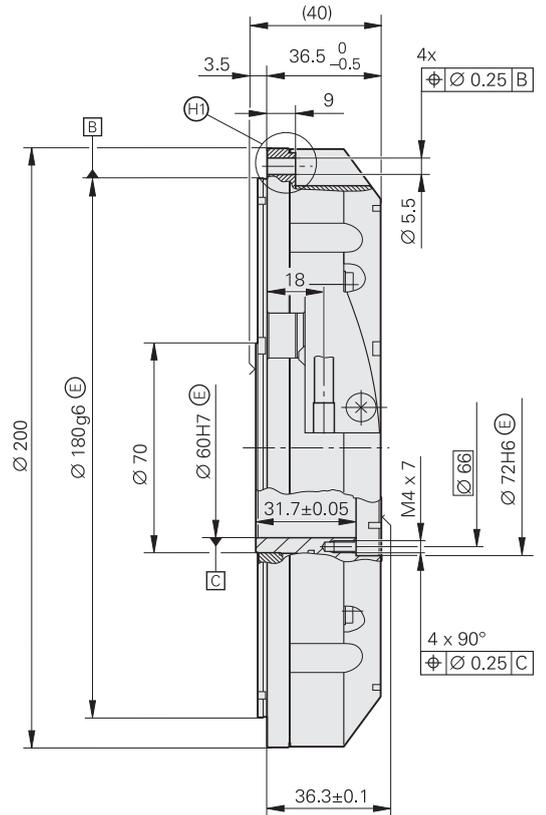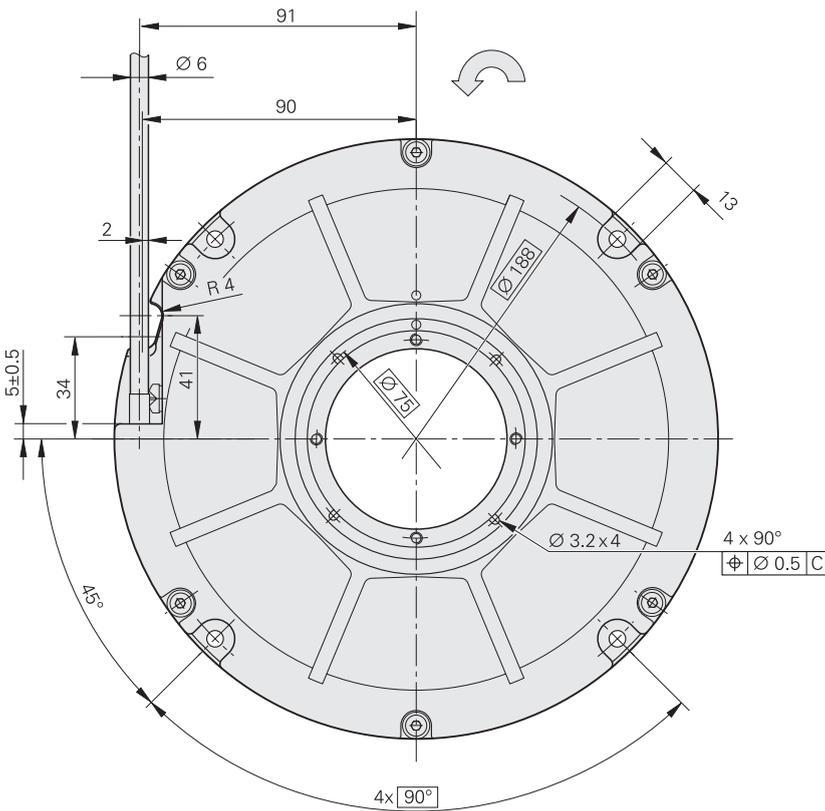


Cable radial, also usable axially

▣ = Bearing

⊙ = Required mating dimensions

⊕ = Shown rotated by 45°

↻ Direction of shaft rotation for output signals as per the interface description

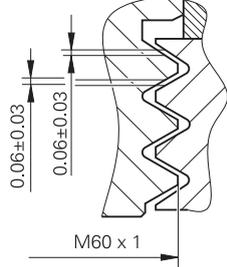

	Incremental		
	RON 786	RON 886	RPN 886
Incremental signals	 1 V _{PP}		
Line count*	18 000 36 000	36 000	90 000 (≅ 180 000 signal periods)
Reference mark*	<i>RON x86</i> : One <i>RON x86 C</i> : Distance-coded		One
Cutoff frequency –3 dB –6 dB	≥ 180 kHz		≥ 800 kHz ≥ 1300 kHz
Recommended meas. step for position capture	0.0001°	0.00005°	0.00001°
System accuracy	± 2"	± 1"	
Power supply without load	5 V ± 10% max. 150 mA		5 V ± 10% max. 250 mA
Electrical connection*	Cable 1 m, with or without M23 coupling		
Max. cable length ¹⁾	150 m		
Shaft	Hollow through shaft D= 60 mm		
Mech. permissible speed	≤ 1000 rpm		
Starting torque	≤ 0.5 Nm at 20 °C		
Moment of inertia of rotor	1.2 · 10 ⁻³ kgm ²		
Natural frequency	≥ 1000 Hz		≥ 500 Hz
Permissible axial motion of measured shaft	≤ ± 0.1 mm		
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60 068-2-6) ≤ 1000 m/s ² (IEC 60 068-2-27)		≤ 50 m/s ² (IEC 60 068-2-6) ≤ 1000 m/s ² (IEC 60 068-2-27)
Operating temperature	0 to 50 °C		
Protection IEC 60 529	IP 64		
Weight	Approx. 2.5 kg		

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable




RON 905

- Integrated stator coupling
- Blind hollow shaft
- System accuracy $\pm 0.4''$

Dimensions in mm



Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm

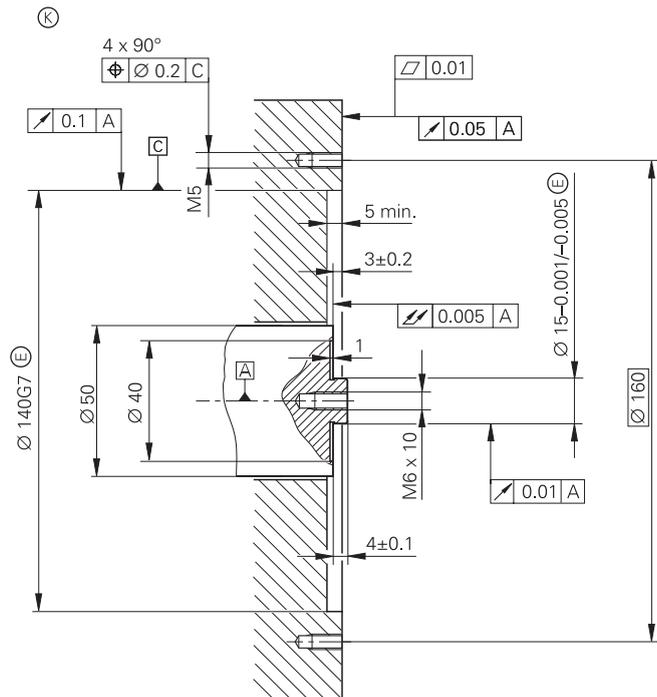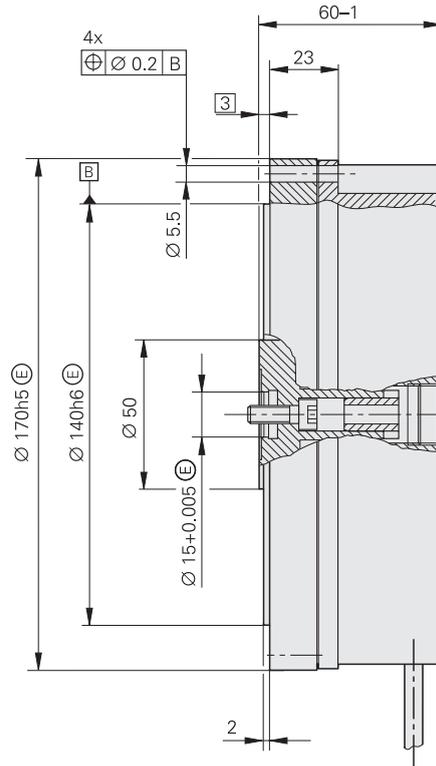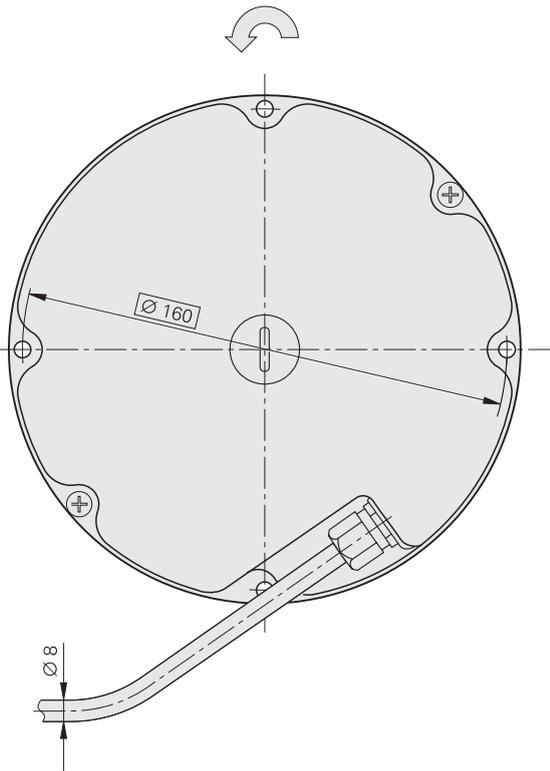

Cable radial, also usable axially

▣ = Bearing

⊗ = Required mating dimensions

↻ Direction of shaft rotation for output signal I₂ lagging I₁

	Incremental RON 905
Incremental signals	$\sim 11 \mu A_{PP}$
Line count	36 000
Reference mark	One
Cutoff frequency -3 dB	≥ 40 kHz
Recommended meas. step for position capture	0.000 01°
System accuracy	$\pm 0.4''$
Power supply without load	5 V \pm 5% max. 250 mA
Electrical connection	Cable 1 m, with M23 connector
Max. cable length ¹⁾	15 m
Shaft	Blind hollow shaft
Mech. permissible speed	≤ 100 rpm
Starting torque	≤ 0.05 Nm at 20 °C
Moment of inertia of rotor	$0.345 \cdot 10^{-3}$ kgm ²
Natural frequency	≥ 350 Hz
Permissible axial motion of measured shaft	$\leq \pm 0,2$ mm
Vibration 55 to 2000 Hz Shock 6 ms	≤ 50 m/s ² (IEC 60068-2-6) ≤ 1000 m/s ² (IEC 60068-2-27)
Operating temperature	10 to 30 °C
Protection IEC 60529	IP 64
Weight	Approx. 4 kg

¹⁾ With HEIDENHAIN cable




ROD 200 Series

- For separate shaft coupling
- System accuracy $\pm 5''$


Dimensions in mm



Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm

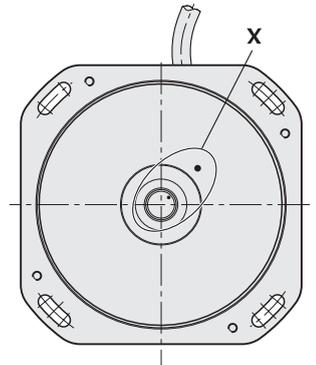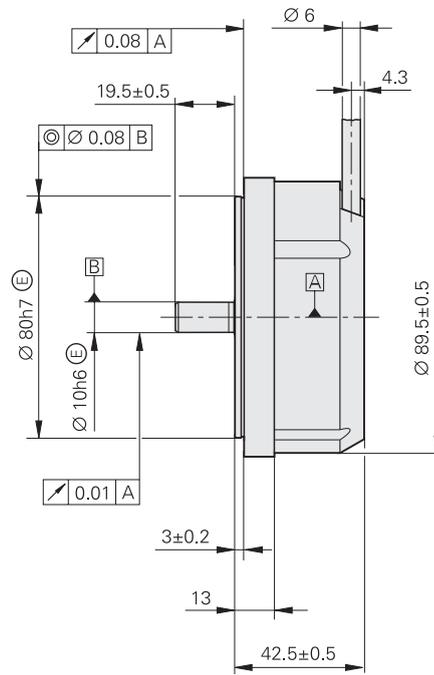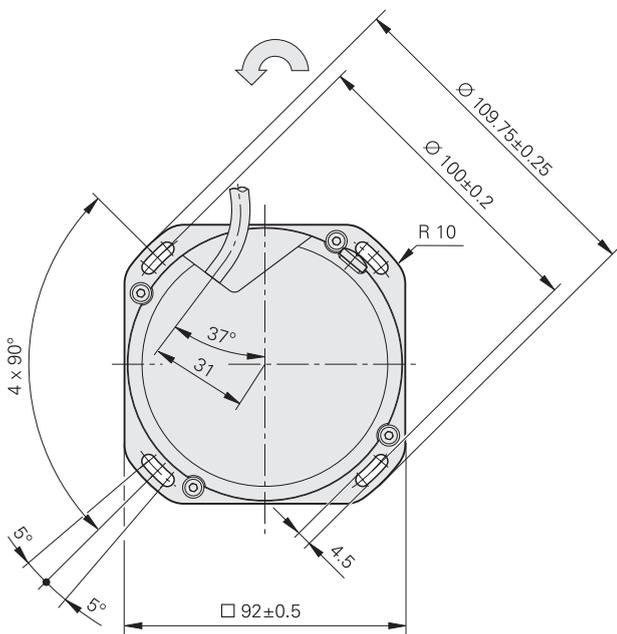

X
2:1

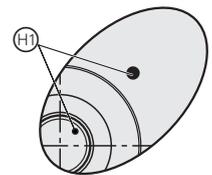

Cable radial, also usable axially

▣ = Bearing

⊕ = Position of the reference mark,

ROD 220/270/280: $\pm 10^\circ$

ROD 280C: $\pm 5^\circ$

↻ Direction of shaft rotation for output signals as per the interface description

	Incremental		
	ROD 220	ROD 270	ROD 280
Incremental signals	□TTL x 2	□TTL x 10	~ 1 V _{PP}
Line count	9000	18000	18000
Integrated interpolation	2-fold	10-fold	–
Output signals/revolution	18000	180000	18000
Reference mark*	One		ROD 280: One ROD 280 C: Distance-coded
Cutoff frequency –3 dB	–	–	≥ 180 kHz
Output frequency	≤ 1 MHz	≤ 1 MHz	–
Edge separation <i>a</i>	≥ 0.125 μs	≥ 0.22 μs	–
Elec. permissible speed	3333 rpm	≤ 333 rpm	–
Recommended meas. step for position capture	0.005°	0.0005°	0.0001°
System accuracy	± 5"		
Power supply without load	5 V ± 10% max. 150 mA		
Electrical connection*	Cable 1 m, with or without M23 coupling		
Max. cable length ¹⁾	100 m		150 m
Shaft	Solid shaft D = 10 mm		
Mech. permissible speed	≤ 10000 rpm		
Starting torque	≤ 0.01 Nm at 20 °C		
Moment of inertia of rotor	20 · 10 ⁻⁶ kgm ²		
Shaft load	Axial: 10 N Radial: 10 N at shaft end		
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60068-2-6) ≤ 1000 m/s ² (IEC 60068-2-27)		
Operating temperature	Moving cable: –10 to 70 °C Stationary cable: –20 to 70 °C		
Protection IEC 60529	IP 64		
Weight	Approx. 0.7 kg		

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable

ROD 780/ROD 880



- For separate shaft coupling
- System accuracy ROD 780: $\pm 2''$
ROD 880: $\pm 1''$



Dimensions in mm



Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm

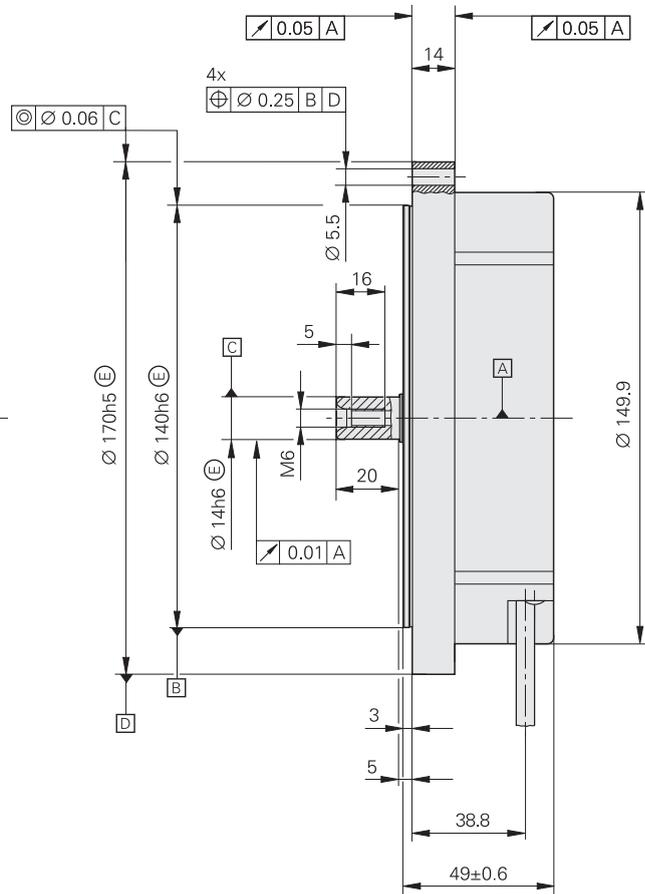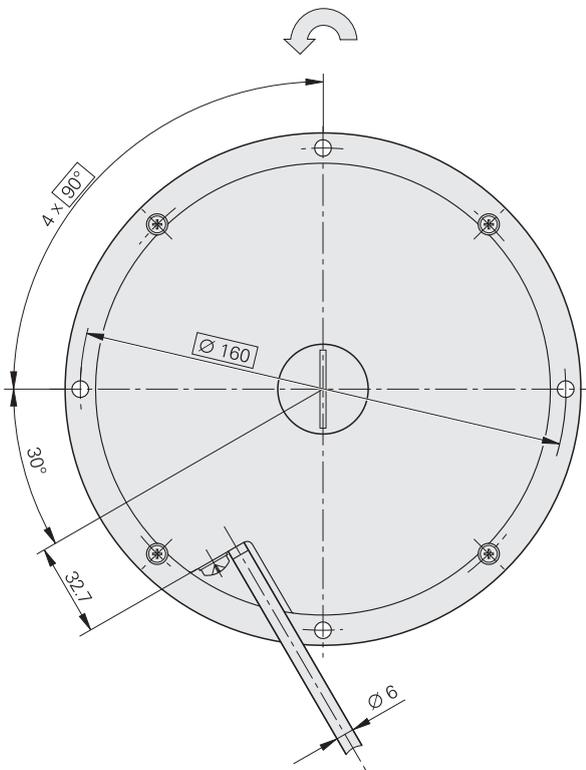

Cable radial, also usable axially

▣ = Bearing

↻ Direction of shaft rotation for output signals as per the interface description

	Incremental	
	ROD 780	ROD 880
Incremental signals	$\sim 1 V_{PP}$	
Line count*	18 000 36 000	36 000
Reference mark*	ROD x80: One ROD x80 C: Distance-coded	
Cutoff frequency -3 dB	≥ 180 kHz	
Recommended meas. step for position capture	0.0001°	0.00005°
System accuracy	$\pm 2''$	$\pm 1''$
Power supply without load	5 V $\pm 10\%$ max. 150 mA	
Electrical connection*	Cable 1 m, with or without M23 coupling	
Max. cable length ¹⁾	150 m	
Shaft	Solid shaft D = 14 mm	
Mech. permissible speed	≤ 1000 rpm	
Starting torque	≤ 0.012 Nm at 20 °C	
Moment of inertia of rotor	$0.36 \cdot 10^{-3}$ kgm ²	
Shaft load	Axial: 30 N Radial: 30 N at shaft end	
Vibration 55 to 2000 Hz Shock 6 ms	≤ 100 m/s ² (IEC 60 068-2-6) ≤ 300 m/s ² (IEC 60 068-2-27)	
Operating temperature	0 to 50 °C	
Protection IEC 60 529	IP 64	
Weight	Approx. 2.0 kg	

* Please indicate when ordering

¹⁾ With HEIDENHAIN cable

Interfaces

Incremental signals $\sim 1 V_{PP}$

HEIDENHAIN encoders with $\sim 1V_{PP}$ interface provide voltage signals that can be highly interpolated.

The sinusoidal **incremental signals** A and B are phase-shifted by 90° elec. and have an amplitude of typically $1 V_{PP}$. The illustrated sequence of output signals—with B lagging A—applies for the direction of motion shown in the dimension drawing.

The **reference mark signal** R has a usable component *G* of approx. $0.5 V$. Next to the reference mark, the output signal can be reduced by up to $1.7 V$ to a quiescent value *H*. This must not cause the subsequent electronics to overdrive. Even at the lowered signal level, signal peaks with the amplitude *G* can also appear.

The data on **signal amplitude** apply when the power supply given in the specifications is connected to the encoder. They refer to a differential measurement at the 120-ohm terminating resistor between the associated outputs. The signal amplitude decreases with increasing frequency. The **cutoff frequency** indicates the scanning frequency at which a certain percentage of the original signal amplitude is maintained:

- -3 dB cutoff frequency:
70% of the signal amplitude
- -6 dB cutoff frequency:
50% of the signal amplitude

Interpolation/resolution/measuring step

The output signals of the $1 V_{PP}$ interface are usually interpolated in the subsequent electronics in order to attain sufficiently high resolutions. For **velocity control**, interpolation factors are commonly over 1000 in order to receive usable velocity information even at low speeds.

Measuring steps for **position measurement** are recommended in the specifications. For special applications, other resolutions are also possible.


Short-circuit stability

A temporary short circuit of one signal output to 0V or U_P does not cause encoder failure, but it is not a permissible operating condition.

Short circuit at	20 °C	125 °C
One output	< 3 min	< 1 min
All outputs	< 20 s	< 5 s


Interface	Sinusoidal voltage signals $\sim 1 V_{PP}$
Incremental signals	2 nearly sinusoidal signals A and B Signal amplitude M: 0.6 to $1.2 V_{PP}$; typ. $1 V_{PP}$ Asymmetry $ P - N /2M$: ≤ 0.065 Signal ratio M_A/M_B : 0.8 to 1.25 Phase angle $ \varphi_1 + \varphi_2 /2$: $90^\circ \pm 10^\circ$ elec.
Reference mark signal	1 or more signal peaks R Usable component G: 0.2 to $0.85 V$ Quiescent value H: $0.04 V$ to $1.7 V$ Switching threshold E, F: $\geq 40 mV$ Zero crossovers K, L: $180^\circ \pm 90^\circ$ elec.
Connecting cable	HEIDENHAIN cable with shielding PUR [$4(2 \times 0.14 mm^2) + (4 \times 0.5 mm^2)$] Cable length Propagation time Max. 150 m distributed capacitance $90 pF/m$ 6 ns/m

Any limited tolerances in the encoders are listed in the specifications.

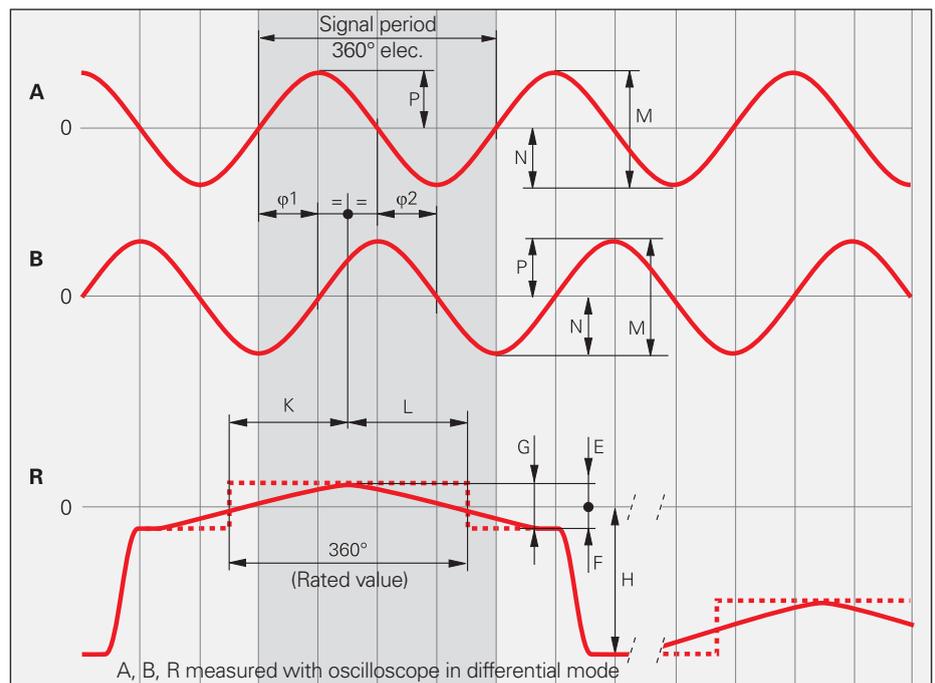

Cutoff frequency

Typical signal amplitude curve with respect to the scanning frequency

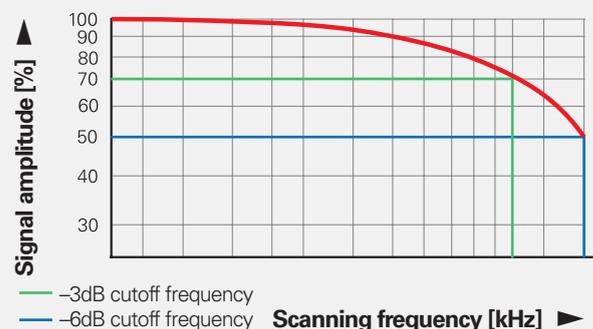

Input circuitry of the subsequent electronics

Dimensioning

Operational amplifier MC 34074

$Z_0 = 120 \Omega$

$R_1 = 10 \text{ k}\Omega$ and $C_1 = 100 \text{ pF}$

$R_2 = 34.8 \text{ k}\Omega$ and $C_2 = 10 \text{ pF}$

$U_B = \pm 15 \text{ V}$

U_1 approx. U_0

-3dB cutoff frequency of circuitry

Approx. 450 kHz

Approx. 50 kHz and $C_1 = 1000 \text{ pF}$

and $C_2 = 82 \text{ pF}$

This circuit variant does reduce the bandwidth of the circuit, but in doing so it improves its noise immunity.

Circuit output signals

$U_a = 3.48 V_{PP}$ typical

Gain 3.48

Signal monitoring

A threshold sensitivity of 250 mV_{PP} is to be provided for monitoring the 1 V_{PP} incremental signals.

Incremental signals Reference mark signal


$R_a < 100 \Omega$, approx. 24 Ω

$C_a < 50 \text{ pF}$


$\Sigma I_a < 1 \text{ mA}$

$U_0 = 2.5 \text{ V} \pm 0.5 \text{ V}$
(relative to 0 V of the power supply)

Encoder

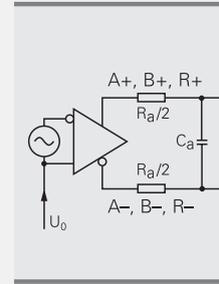

Subsequent electronics

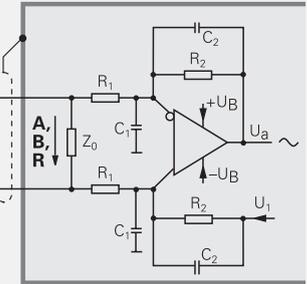

Pin Layout

12-pin M23 coupling				12-pin M23 connector				15-pin D-sub connector, female for HEIDENHAIN controls and IK 220					
	Power supply			Incremental signals						Other signals			
	12	2	10	11	5	6	8	1	3	4	7/9	/	/
	1	9	2	11	3	4	6	7	10	12	5/8/13/14/15	/	/
	U_P	Sensor U_P	0V	Sensor 0V	A+	A-	B+	B-	R+	R-	Vacant	Vacant	Vacant
	Brown/ Green	Blue	White/ Green	White	Brown	Green	Gray	Pink	Red	Black	/	Violet	Yellow

Shield on housing; U_P = power supply voltage

Sensor: The sensor line is connected internally with the corresponding power line

Vacant pins or wires must not be used!

Interfaces

Incremental Signals

HEIDENHAIN encoders with  interface incorporate electronics that digitize sinusoidal scanning signals with or without interpolation.

The **incremental signals** are transmitted as the square-wave pulse trains U_{a1} and U_{a2} , phase-shifted by 90° elec. The **reference mark signal** consists of one or more reference pulses U_{a0} , which are gated with the incremental signals. In addition, the integrated electronics produce their **inverse signals** $\overline{U_{a1}}$, $\overline{U_{a2}}$ and $\overline{U_{a0}}$ for noise-proof transmission. The illustrated sequence of output signals—with U_{a2} lagging U_{a1} —applies for the direction of motion shown in the dimension drawing.



The **fault-detection signal** $\overline{U_{aS}}$ indicates fault conditions such as breakage of the power line or failure of the light source. It can be used for such purposes as machine shut-off during automated production.

The distance between two successive edges of the incremental signals U_{a1} and U_{a2} through 1-fold, 2-fold or 4-fold evaluation is one **measuring step**.

The subsequent electronics must be designed to detect each edge of the square-wave pulse. The minimum **edge separation a** listed in the *Specifications* applies for the illustrated input circuitry with a cable length of 1 m, and refers to a measurement at the output of the differential line receiver. Propagation-time differences in cables additionally reduce the edge separation by 0.2 ns per meter of cable length. To prevent counting error, design the subsequent electronics to process as little as 90% of the resulting edge separation. The max. permissible **shaft speed** or **traversing velocity** must never be exceeded.

The permissible **cable length** for transmission of the TTL square-wave signals to the subsequent electronics depends on the edge separation a . It is max. 100 m, or 50 m for the fault detection signal. This requires, however, that the power supply (see *Specifications*) be ensured at the encoder. The sensor lines can be used to measure the voltage at the encoder and, if required, correct it with an automatic system (remote sense power supply).

Interface	Square-wave signals 
Incremental signals	2 TTL square-wave signals U_{a1}, U_{a2} and their inverted signals $\overline{U_{a1}}$, $\overline{U_{a2}}$
Reference mark signal Pulse width Delay time	1 or more square-wave pulses U_{a0} and their inverted pulses $\overline{U_{a0}}$ 90° elec. (other widths available on request); LS 323: ungated $ t_d \leq 50$ ns
Fault detection signal Pulse width	1 TTL square-wave pulse $\overline{U_{aS}}$ Improper function: LOW (upon request: U_{a1}/U_{a2} high impedance) Proper function: HIGH $t_s \geq 20$ ms
Signal level	Differential line driver as per EIA standard RS 422 $U_H \geq 2.5$ V at $-I_H = 20$ mA $U_L \leq 0.5$ V at $I_L = 20$ mA
Permissible load	$Z_0 \geq 100 \Omega$ between associated outputs $ I_L \leq 20$ mA max. load per output $C_{load} \leq 1000$ pF with respect to 0 V Outputs protected against short circuit to 0 V
Switching times (10% to 90%)	$t_r / t_f \leq 30$ ns (typically 10 ns) with 1 m cable and recommended input circuitry
Connecting cable Cable length Propagation time	HEIDENHAIN cable with shielding PUR [$4(2 \times 0.14 \text{ mm}^2) + (4 \times 0.5 \text{ mm}^2)$] Max. 100 m ($\overline{U_{aS}}$ max. 50 m) distributed capacitance 90 pF/m 6 ns/m

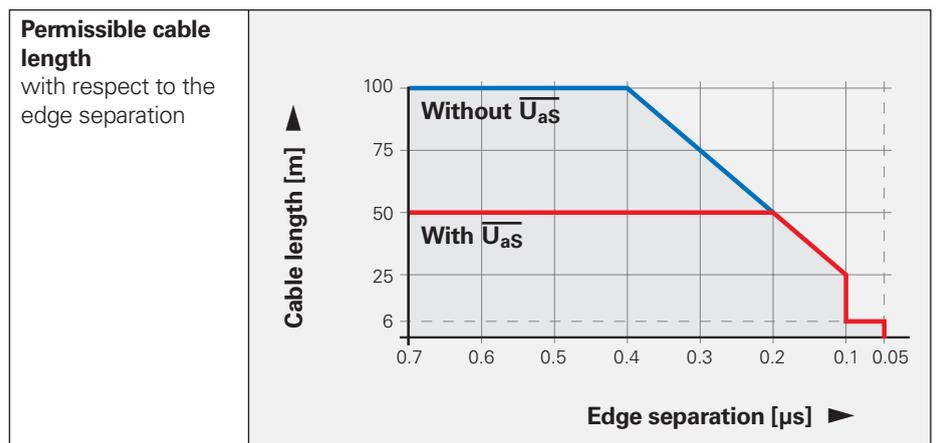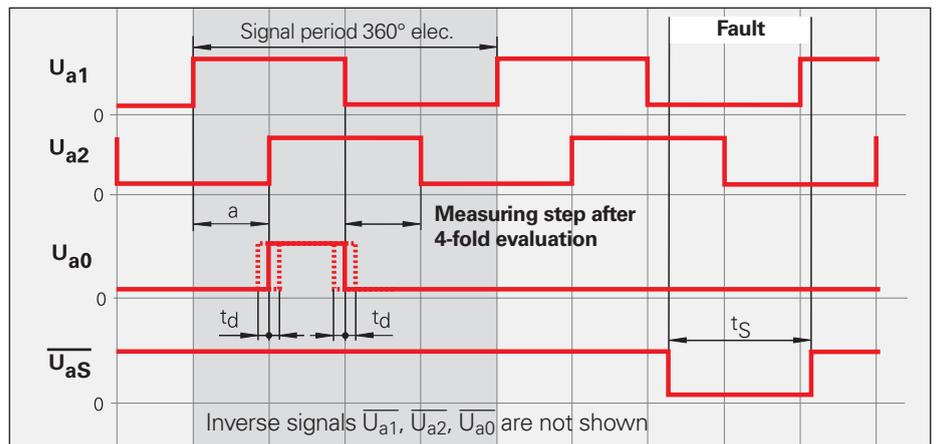


Input circuitry of the subsequent electronics

Dimensioning

IC₁ = Recommended differential line receivers
 DS 26 C 32 AT
 Only for $a > 0.1 \mu\text{s}$:
 AM 26 LS 32
 MC 3486
 SN 75 ALS 193

$R_1 = 4.7 \text{ k}\Omega$
 $R_2 = 1.8 \text{ k}\Omega$
 $Z_0 = 120 \Omega$
 $C_1 = 220 \text{ pF}$ (serves to improve noise immunity)

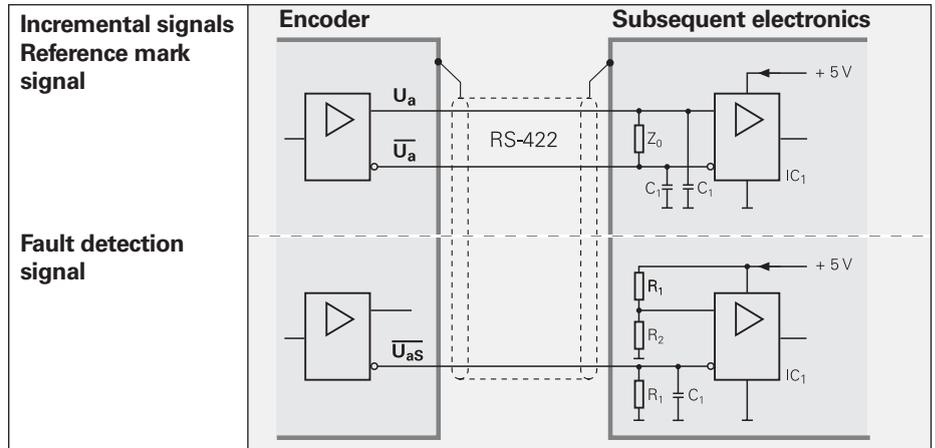

Pin Layout

12-pin flange socket or M23 coupling				12-pin connector M23								
Power supply				Incremental signals						Other signals		
12	2	10	11	5	6	8	1	3	4	7	9	
U_P	Sensor U_P	0V	Sensor 0V	U_{a1}	\overline{U}_{a1}	U_{a2}	\overline{U}_{a2}	U_{a0}	\overline{U}_{a0}	$\overline{U}_{aS}^{(1)}$	Vacant ⁽²⁾	
Brown/ Green	Blue	White/ Green	White	Brown	Green	Gray	Pink	Red	Black	Violet	Yellow ⁽²⁾	

Shield on housing; U_P = power supply voltage

Sensor: The sensor line is connected internally with the corresponding power line

¹⁾ **LS 323/ERO 14xx:** Vacant ²⁾ **Exposed linear encoders:** TTL/11 μA_{PP} conversion for PWT, otherwise vacant

Vacant pins or wires must not be used!

Interfaces

Absolute Position Values EnDat


The EnDat interface is a digital, **bidirectional** interface for encoders. It is capable of transmitting **position values** from both absolute and—with EnDat 2.2—incremental encoders, as well as reading and updating information stored in the encoder, or of saving new information. Thanks to the **serial transmission method** only **four signal lines** are required. The data are transmitted **in synchronism** with the clock signal from the subsequent electronics. The type of transmission (position values, parameters, diagnostics, etc.) is selected by mode commands that the subsequent electronics send to the encoder.

Clock frequency and cable length

Without propagation-delay compensation, the **clock frequency**—depending on the cable length—is variable between **100 kHz** and **2 MHz**.

Because large cable lengths and high clock frequencies increase the signal run time to the point that they can disturb the unambiguous assignment of data, the delay can be measured in a test run and then compensated. With this **propagation-delay compensation** in the subsequent electronics, clock frequencies up to **8 MHz** at cable lengths up to a maximum of 100 m are possible. The maximum clock frequency is mainly determined by the cables and connecting elements used. To ensure proper function at clock frequencies above 2 MHz, use only original ready-made HEIDENHAIN cables.

Interface	EnDat serial bidirectional
Data transfer	Absolute position values, parameters and additional information
Data input	Differential line receiver according to EIA standard RS 485 for the CLOCK, CLOCK, DATA and DATA signals
Data output	Differential line driver according to EIA standard RS 485 for the DATA and DATA signals
Code	Pure binary code
Position values	Ascending during traverse in direction of arrow (see Dimensions)
Incremental signals	$\sim 1 V_{PP}$ (see <i>Incremental Signals 1 V_{PP}</i>) depending on unit
Connecting cable	HEIDENHAIN cable with shielding With incremental signals: PUR [(4 x 0.14 mm ²) + 4(2 x 0.14 mm ²) + (4 x 0.5 mm ²)] Without signals: PUR [(4 x 0.14 mm ²) + (4 x 0.34 mm ²)]
Cable length	Max. 150 m
Propagation time	Max. 10 ns; approx. 6 ns/m

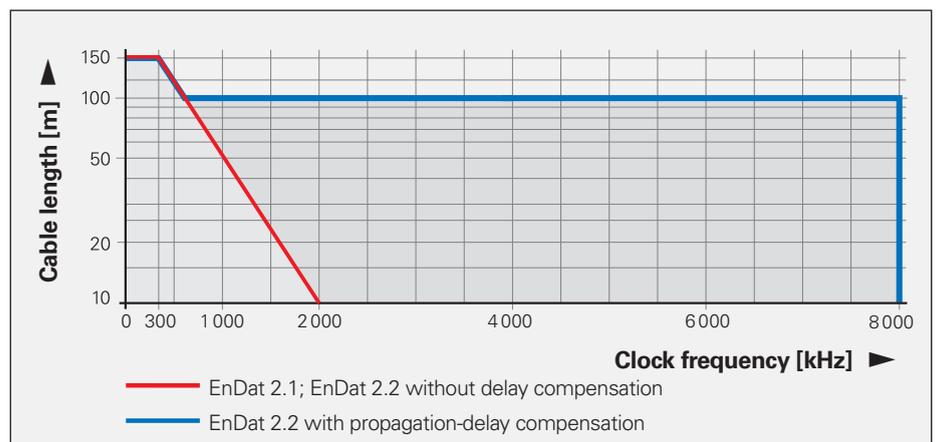


Input circuitry of the subsequent electronics

Dimensioning

IC₁ = RS 485 differential line receiver and driver

$$C_3 = 330 \text{ pF}$$

$$Z_0 = 120 \text{ } \Omega$$

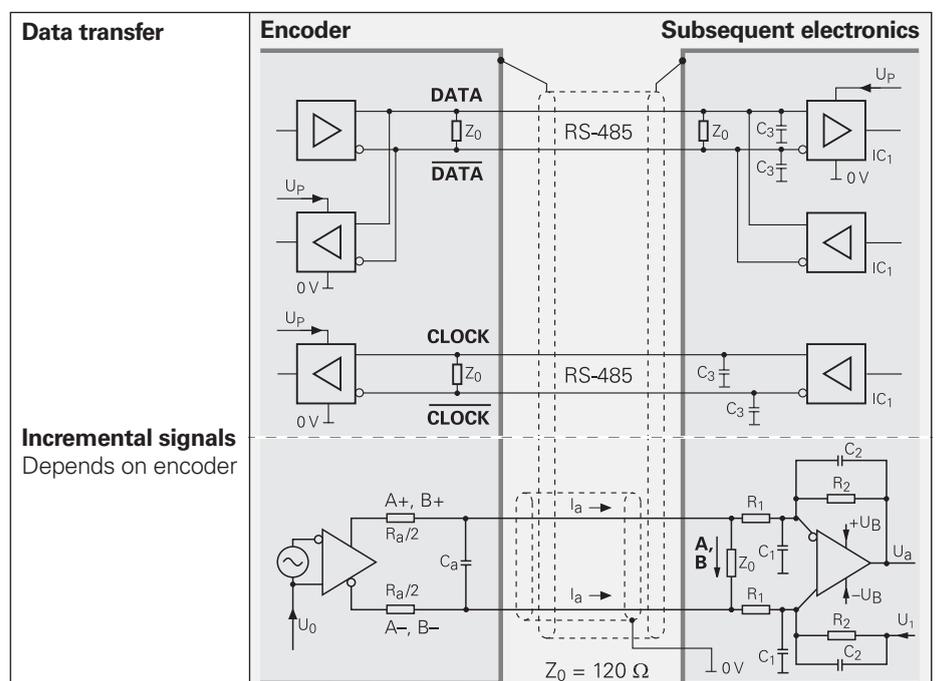

Versions

The extended EnDat interface version 2.2 is compatible in its communication, command set and time conditions with version 2.1, but also offers significant advantages. It makes it possible, for example, to transfer additional information with the position value without sending a separate request for it. The interface protocol was expanded and the time conditions (clock frequency, processing time, recovery time) were optimized. In addition, encoders with ordering designations EnDat 02 or EnDat 22 have an extended power supply range.

Both EnDat 2.1 and EnDat 2.2 are available in versions with or without incremental signals. EnDat 2.2 encoders feature a high internal resolution. Therefore, depending on the control technology being used, interrogation of the incremental signals is not necessary. To increase the resolution of EnDat 2.1 encoders, the incremental signals are evaluated in the subsequent electronics.

Command set

The command set is the sum of all available mode commands. The EnDat 2.2 command set includes EnDat 2.1 mode commands. When a mode command from the EnDat 2.2 command set is transmitted to EnDat 01 subsequent electronics, the encoder or the subsequent electronics may generate an error message.

EnDat 2.2 command set (includes EnDat 2.1 command set)

- Position values for incremental and absolute encoders
- Additional information on position value
 - Diagnostics and test values
 - Absolute position values after reference run of incremental encoders
 - Parameter upload/download
 - Commutation
 - Acceleration
 - Limit position signal
 - Temperature of the encoder PCB
 - Temperature evaluation of an external temperature sensor (e.g. in the motor winding)

EnDat 2.1 command set

- Absolute position values
- Parameter upload/download
- Reset
- Test command and test values

Interface	Command set	Ordering designation	Version	Clock frequency
EnDat	EnDat 2.1 or EnDat 2.2	EnDat 01	With incremental signals	≤ 2 MHz
		EnDat 21	Without incremental signals	
	EnDat 2.2	EnDat 02	With incremental signals	≤ 2 MHz
	EnDat 2.2	EnDat 22	Without incremental signals	≤ 8 MHz

Benefits of the EnDat Interface

- **Automatic self-configuration:** All information required by the subsequent electronics is already stored in the encoder
- **High system security** through alarms and messages for monitoring and diagnosis
- **High transmission reliability** through cyclic redundancy checking
- **Faster configuration during installation: Datum shifting** through offsetting by a value in the encoder

Other benefits of EnDat 2.2

- **A single interface** for all absolute and incremental encoders
- **Additional information** (limit switch, temperature, acceleration)
- **Quality improvement:** Position value calculation in the encoder permits shorter sampling intervals (25 µs)

Advantages of purely serial

transmission specifically for EnDat 2.2 encoders

- **Simple subsequent electronics** with EnDat receiver chip
- **Simple connection technology:** Standard connecting elements (M12 — 8-pin) single-shielded standard cable and low wiring costs
- **Minimized transmission times** through adaptation of the data word length to the resolution of the encoder
- **High clock frequencies** up to 8 MHz. Position values available in the subsequent electronics after only approx. 10 µs
- **Support for state-of-the-art machine designs** e.g. direct drive technology

Functions

The EnDat interface transmits absolute position values or additional physical quantities (only EnDat 2.2) in an unambiguous time sequence and serves to read from and write to the encoder's internal memory. Some functions are available only with EnDat 2.2 mode commands.

Position values can be transmitted with or without additional information. The additional information types are selectable via the Memory Range Select (MRS) code. Other functions such as parameter reading and writing can also be called after the memory area and address have been selected. Through simultaneous transmission with the position value, additional information can also be requested of axes in the feedback loop, and functions executed with them.

Parameter reading and writing is possible both as a separate function and in connection with the position value. Parameters can be read or written after the memory area and address is selected.

Reset functions serve to reset the encoder in case of malfunction. Reset is possible instead of or during position value transmission.

Servicing diagnostics make it possible to inspect the position value even at a standstill. A test command has the encoder transmit the required test values.

You can find more information in the *Technical Information* document for EnDat 2.2 or on the Internet at www.endat.de.

Selecting the Transmission Type

Transmitted data are identified as either position values, position values with additional information, or parameters. The type of information to be transmitted is selected by mode commands. **Mode commands** define the content of the transmitted information. Every mode command consists of three bits. To ensure reliable transmission, every bit is transmitted redundantly (inverted or double). If the encoder detects an erroneous mode transmission, it transmits an error message. The EnDat 2.2 interface can also transfer parameter values in the additional information together with the position value. This makes the current position values constantly available for the control loop, even during a parameter request.

Control cycles for transfer of position values

The transmission cycle begins with the first falling **clock edge**. The measured values are saved and the position value calculated. After two clock pulses (2T), to **select the type of transmission** the subsequent electronics transmit the mode command "Encoder transmit position value" (with/without additional information).

After successful calculation of the absolute position value (t_{cal} —see table), the **start bit** begins the data transmission from the encoder to the subsequent electronics. The subsequent **error messages**, error 1 and error 2 (only with EnDat 2.2 commands), are group signals for all monitored functions and serve as failure monitors.

Beginning with the LSB, the encoder then transmits the absolute **position value** as a complete data word. Its length varies depending on which encoder is being used. The number of required clock pulses for transmission of a position value is saved in the parameters of the encoder manufacturer. The data transmission of the position value is completed with the **Cyclic Redundancy Check (CRC)**.

In EnDat 2.2, this is followed by additional information 1 and 2, each also concluded with a CRC. With the end of the data word, the clock must be set to HIGH. After 10 to 30 μ s or 1.25 to 3.75 μ s (with EnDat 2.2 parameterizable recovery time t_m) the data line falls back to LOW. Then a **new data transmission** can begin by starting the clock.

Mode commands

<ul style="list-style-type: none"> Encoder transmit position value Selection of the memory area Encoder receive parameters Encoder transmit parameters Encoder receive reset¹⁾ Encoder transmit test values Encoder receive test commands 	EnDat 2.1	EnDat 2.2
<ul style="list-style-type: none"> Encoder transmit position value with additional information Encoder transmit position value and receive selection of memory area²⁾ Encoder transmit position value and receive parameters²⁾ Encoder transmit position value and transmit parameters²⁾ Encoder transmit position value and receive error reset²⁾ Encoder transmit position value and receive test command²⁾ Encoder receive communication command³⁾ 		

¹⁾ Same reaction as switching the power supply off and on

²⁾ Selected additional information is also transmitted



³⁾ Reserved for encoders that do not support the safety system

The time absolute linear encoders need for calculating the position values t_{cal} differs depending on whether EnDat 2.1 or EnDat 2.2 mode commands are transmitted (see *Specifications* in the *Linear Encoders for Numerically Controlled Machine Tools* brochure). If the incremental signals are evaluated for axis control, then the EnDat 2.1 mode commands should be used. Only in this manner can an active error message be transmitted synchronously to the currently requested position value. EnDat 2.1 mode commands should not be used for pure serial position-value transfer for axis control.

		Without delay compensation	With delay compensation
Clock frequency	f_c	100 kHz ... 2 MHz	100 kHz ... 8 MHz
Calculation time for Position value Parameters	t_{cal} t_{ac}	See <i>Specifications</i> Max. 12 ms	
Recovery time	t_m	<i>EnDat 2.1</i> : 10 to 30 μ s <i>EnDat 2.2</i> : 10 to 30 μ s or 1.25 to 3.75 μ s ($f_c \geq 1$ MHz) (parameterizable)	
	t_R	Max. 500 ns	
	t_{ST}	–	2 to 10 μ s
Data delay time	t_D	(0.2 + 0.01 x cable length in m) μ s	
Pulse width	t_{HI}	0.2 to 10 μ s	Pulse width fluctuation HIGH to LOW max. 10%
	t_{LO}	0.2 to 50 ms/30 μ s (with LC)	

EnDat 2.2 – Transfer of Position Values


EnDat 2.2 can transmit position values with or without additional information.

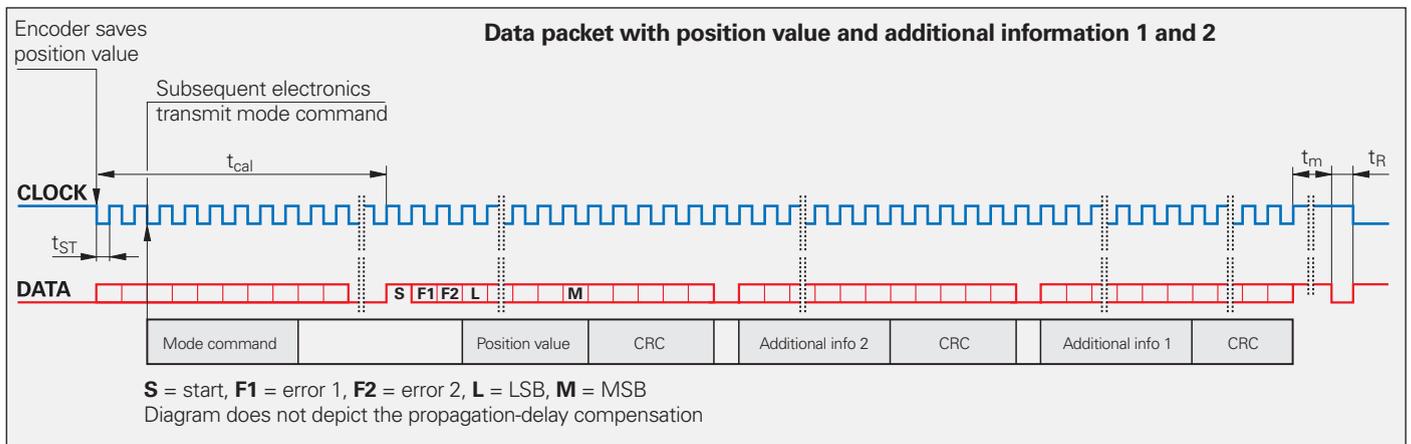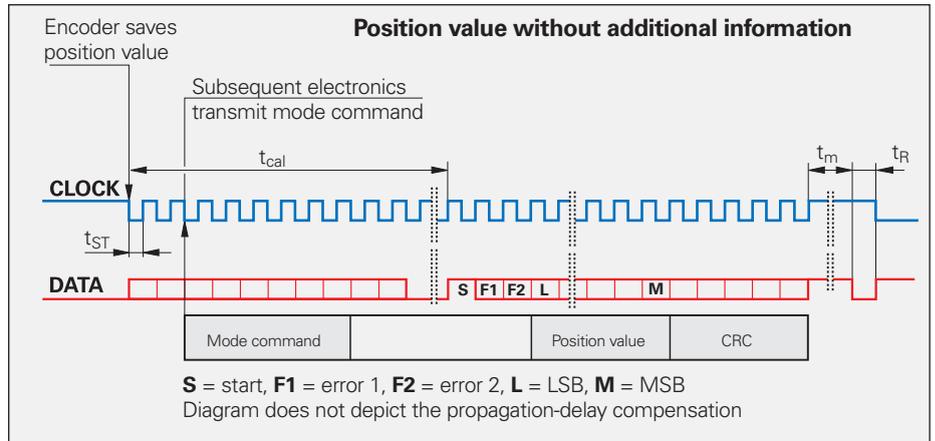

Additional information

With EnDat 2.2, one or two pieces of additional information can be appended to the position value. Each additional information is 30 bits long with LOW as first bit, and ends with a CRC check. The additional information supported by the respective encoder is saved in the encoder parameters.

The content of the additional information is determined by the MRS code and is transmitted in the next sampling cycle for additional information. This information is then transmitted with every sampling until a selection of a new memory area changes the content.

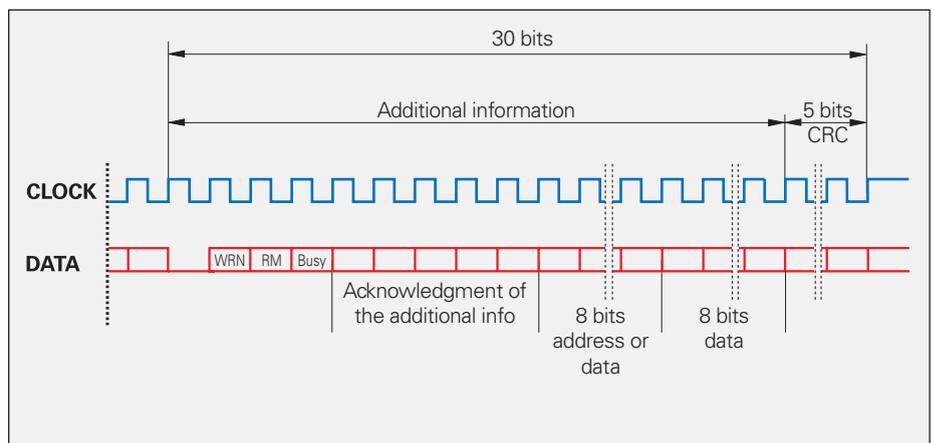

The additional information always begins with:

Status data
Warning – WRN
Reference mark – RM
Parameter request – Busy
Acknowledgment of additional information

The additional information can contain the following data:

Additional information 1
Diagnosis
Position value 2
Memory parameters
MRS-code acknowledgment
Test values
Temperature

Additional information 2
Commutation
Acceleration
Limit position signals

EnDat 2.1 – Transmission of Position Values

EnDat 2.1 can transmit position values with interrupted clock pulse (as in EnDat 2.2) or continuous clock pulse.

Interrupted clock

The interrupted clock is intended particularly for time-clocked systems such as closed control loops. At the end of the data word the clock signal is set to HIGH level. After 10 to 30 μs (t_m), the data line falls back to LOW. A new data transmission can then begin when started by the clock.




Continuous clock

For applications that require fast acquisition of the measured value, the EnDat interface can have the clock run continuously. Immediately after the last CRC bit has been sent, the data line is switched to high for one clock cycle, and then to low. The new position value is saved with the very next falling edge of the clock and is output in synchronism with the clock signal immediately after the start bit and alarm bit. Because the mode command *Encoder transmit position value* is needed only before the first data transmission, the continuous-clock transfer mode reduces the length of the clock-pulse group by 10 periods per position value.

Synchronization of the serially transmitted code value with the incremental signal

Absolute encoders with EnDat interface can exactly synchronize serially transmitted absolute position values with incremental values. With the first falling edge (latch signal) of the CLOCK signal from the subsequent electronics, the scanning signals of the individual tracks in the encoder and counter are frozen, as are the A/D converters for subdividing the sinusoidal incremental signals in the subsequent electronics.

The code value transmitted over the serial interface unambiguously identifies one incremental signal period. The position value is absolute within one sinusoidal period of the incremental signal. The subdivided incremental signal can therefore be appended in the subsequent electronics to the serially transmitted code value.

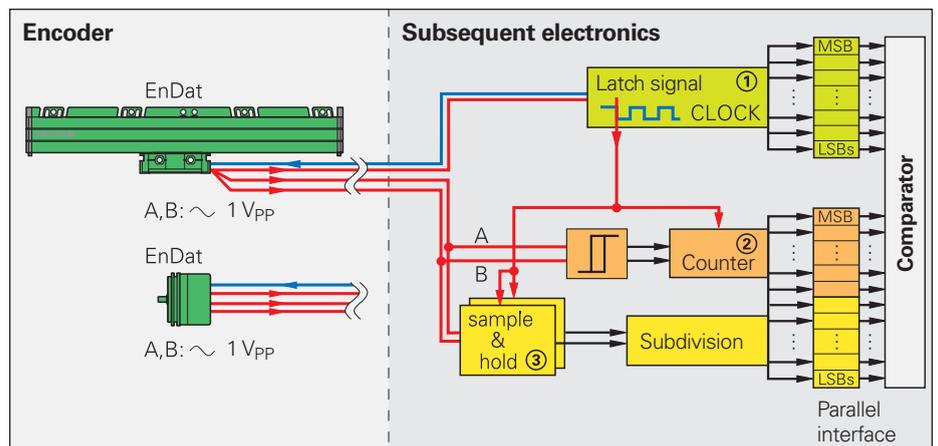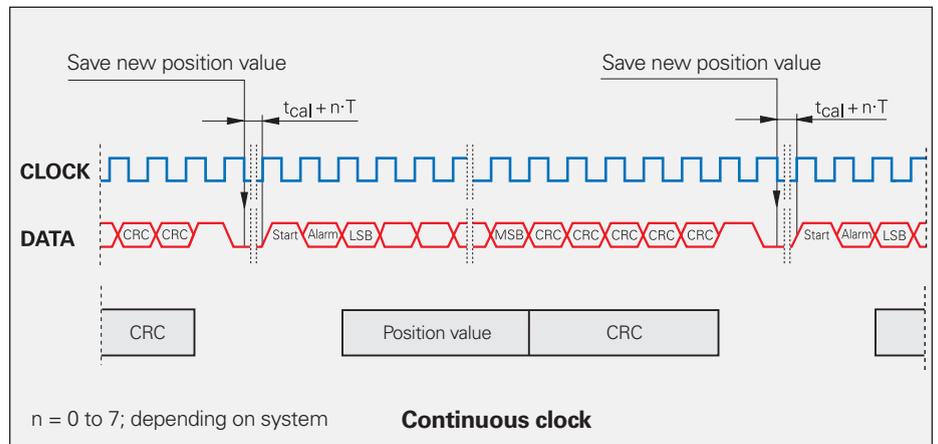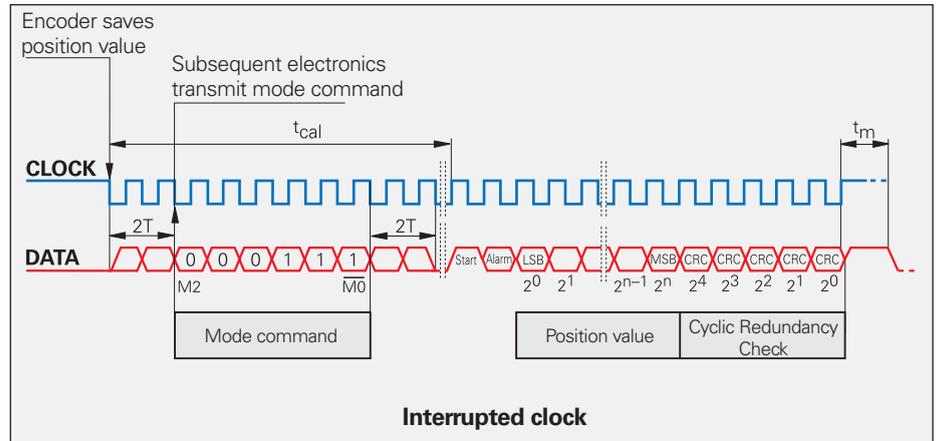

After power on and initial transmission of position values, two redundant position values are available in the subsequent electronics. Since encoders with EnDat interface guarantee a precise synchronization—regardless of cable length—of the serially transmitted absolute value with the incre-

mental signals, the two values can be compared in the subsequent electronics. This monitoring is possible even at high shaft speeds thanks to the EnDat interface's short transmission times of less than 50 μs . This capability is a prerequisite for modern machine design and safety systems.

Parameters and Memory Areas

The encoder provides several memory areas for parameters. These can be read from by the subsequent electronics, and some can be written to by the encoder manufacturer, the OEM, or even the end user. Certain memory areas can be write-protected.

 The parameters, which in most cases are set by the OEM, largely define the function of the encoder and the EnDat interface. When the encoder is exchanged, it is therefore essential that its parameter settings are correct. Attempts to configure machines without including OEM data can result in malfunctions. If there is any doubt as to the correct parameter settings, the OEM should be consulted.

Parameters of the encoder manufacturer

This write-protected memory area contains all **information specific to the encoder**, such as encoder type (linear/angular, singleturn/multiturn, etc.), signal periods, position values per revolution, transmission format of position values, direction of rotation, maximum speed, accuracy dependent on shaft speeds, warnings and alarms, part number and serial number. This information forms the basis for **automatic configuration**. A separate memory area contains the parameters typical for EnDat 2.2: Status of additional information, temperature, acceleration, support of diagnostic and error messages, etc.

Parameters of the OEM

In this freely definable memory area, the OEM can store his information, e.g. the “electronic ID label” of the motor in which the encoder is integrated, indicating the motor model, maximum current rating, etc.

Operating parameters

This area is available for a **datum shift** and the configuration of diagnostics. It can be protected against overwriting.

Operating status

This memory area provides detailed alarms or warnings for diagnostic purposes. Here it is also possible to activate write protection for the OEM parameter and operating parameter memory areas, and to interrogate their status. Once **write protection** is activated, it cannot be removed.

Safety System

The safety system is in preparation. Safety-oriented controls are the planned application for encoders with EnDat 2.2 interface. The ISO 13849-1 (previously EN 954-1) and IEC 61508 standards serve as the foundation for this.

Monitoring and Diagnostic Functions

The EnDat interface enables comprehensive monitoring of the encoder without requiring an additional transmission line. The alarms and warnings supported by the respective encoder are saved in the “parameters of the encoder manufacturer” memory area.

Error message

An error message becomes active if a **malfunction of the encoder** might result in incorrect position values. The exact cause of the disturbance is saved in the “operating status” memory and can be interrogated in detail. Errors include, for example,

- Light unit failure
- Signal amplitude too low
- Error in calculation of position value
- Power supply too high/low
- Current consumption is excessive


Here the EnDat interface transmits the error bits, error 1 and error 2 (only with EnDat 2.2 commands). These are group signals for all monitored functions and serve for failure monitoring. The two error messages are generated independently from each other.

Warning

This collective bit is transmitted in the status data of the additional information. It indicates that certain **tolerance limits of the encoder** have been reached or exceeded—such as shaft speed or the limit of light source intensity compensation through voltage regulation—without implying that the measured position values are incorrect. This function makes it possible to issue preventive warnings in order to minimize idle time.


Cyclic Redundancy Check

To ensure **reliability of data transfer**, a cyclic redundancy check (CRC) is performed through the logical processing of the individual bit values of a data word. This 5-bit long CRC concludes every transmission. The CRC is decoded in the receiver electronics and compared with the data word. This largely eliminates errors caused by disturbances during data transfer.

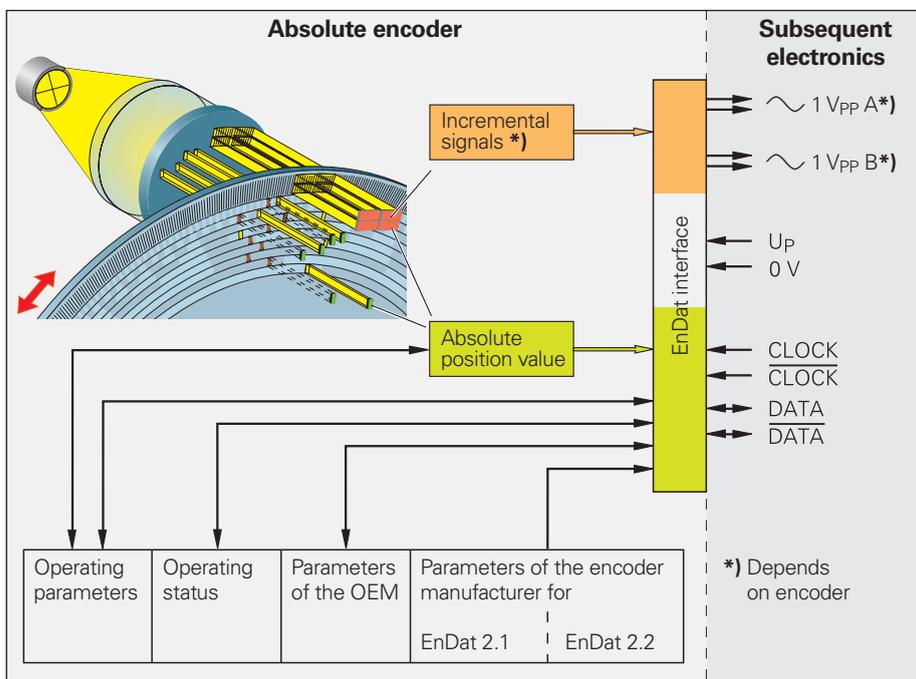

Pin Layout

17-pin M23 coupling

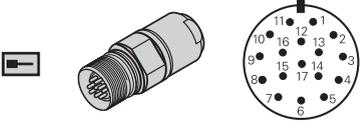

	Power supply					Incremental signals ¹⁾				Absolute position values			
	7	1	10	4	11	15	16	12	13	14	17	8	9
	U_P	Sensor U _P	0V	Sensor 0V	Inside shield	A+	A-	B+	B-	DATA	DATA	CLOCK	CLOCK
	Brown/ Green	Blue	White/ Green	White	/	Green/ Black	Yellow/ Black	Blue/ Black	Red/ Black	Gray	Pink	Violet	Yellow

Shield on housing; **U_P** = power supply voltage

Sensor: The sensor line is connected internally with the corresponding power line

Vacant pins or wires must not be used!

¹⁾ Only with ordering designations EnDat 01 and EnDat 02

8-pin M12 coupling






	Power supply				Absolute position values			
	2	8	1	5	3	4	7	6
	U_P ¹⁾	U_P	0V ¹⁾	0V	DATA	DATA	CLOCK	CLOCK
	Blue	Brown/Green	White	White/Green	Gray	Pink	Violet	Yellow

Shield on housing; **U_P** = power supply voltage

Vacant pins or wires must not be used!

¹⁾ For parallel supply lines

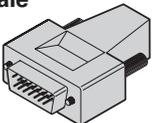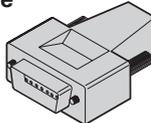15-pin D-sub connector, male for IK 115/IK 215						15-pin D-sub connector, female for HEIDENHAIN controls and IK 220							
													
													
													
	Power supply					Incremental signals ¹⁾				Absolute position values			
	4	12	2	10	6	1	9	3	11	5	13	8	15
	1	9	2	11	13	3	4	6	7	5	8	14	15
	U_P	Sensor U _P	0V	Sensor 0V	Inside shield	A+	A-	B+	B-	DATA	DATA	CLOCK	CLOCK
	Brown/ Green	Blue	White/ Green	White	/	Green/ Black	Yellow/ Black	Blue/ Black	Red/ Black	Gray	Pink	Violet	Yellow

Shield on housing; **U_P** = power supply voltage

Sensor: The sensor line is connected internally with the corresponding power line

Vacant pins or wires must not be used!

¹⁾ Only with ordering designations EnDat 01 and EnDat 02


Interfaces

Fanuc and Mitsubishi Pin Layouts

Fanuc pin layout

HEIDENHAIN encoders with the code letter F after the model designation are suited for connection to Fanuc controls with

- **Fanuc 01 serial interface**
with 1 MHz communication rate
- **Fanuc 02 serial interface**
with 1 MHz or 2 MHz communication rate

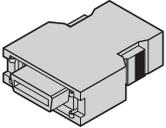15-pin Fanuc connector					17-pin HEIDENHAIN coupling				
									
	Power supply					Absolute Position Values			
	9	18/20	12	14	16	1	2	5	6
	7	1	10	4	–	14	17	8	9
	U_P	Sensor U_P	0V	Sensor 0V	Shield	Serial Data	Serial Data	Request	Request
	Brown/ Green	Blue	White/ Green	White	–	Gray	Pink	Violet	Yellow




Shield on housing; **U_P** = power supply voltage

Sensor: The sensor line is connected internally with the corresponding power line

Vacant pins or wires must not be used!

Mitsubishi pin layout

HEIDENHAIN encoders with the code letter M after the model designation are suited for connection to controls with the **Mitsubishi high-speed serial interface**.

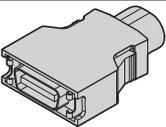10 or 20-pin Mitsubishi connector					17-pin HEIDENHAIN coupling				
									
	Power supply					Absolute Position Values			
	10-pin	1	–	2	–	7	8	3	4
	20-pin	20	19	1	11	6	16	7	17
		7	1	10	4	14	17	8	9
		U_P	Sensor U_P	0V	Sensor 0V	Serial Data	Serial Data	Request frame	Request frame
		Brown/Green	Blue	White/Green	White	Gray	Pink	Violet	Yellow

Shield on housing; **U_P** = power supply voltage

Sensor: The sensor line is connected internally with the corresponding power line


Vacant pins or wires must not be used!


Connecting Elements and Cables

General Information

Insulated **connector**: Connecting element with coupling ring; available with male or female contacts.


Symbols  


M12 

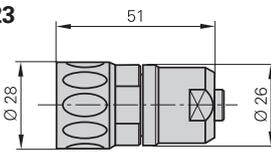
M23 


Insulated **coupling**: Connecting element with external thread; available with male or female contacts.

Symbols  

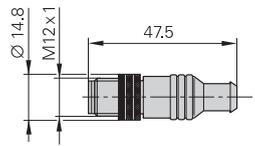M12 

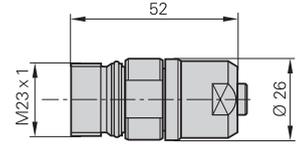
M23 

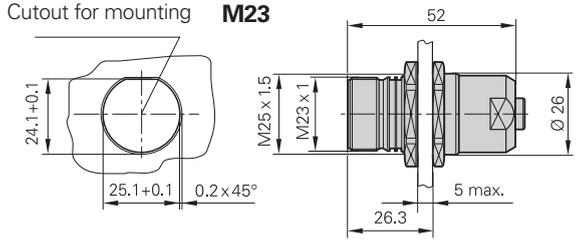Mounted coupling with central fastening 

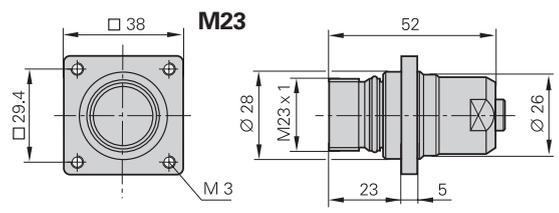Mounted coupling with flange 


Flange socket: Permanently mounted on the encoder or a housing, with external thread (like the coupling), and available with male or female contacts.

Symbols  

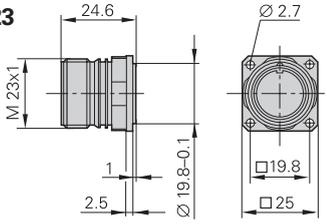M23 

D-sub connector: For HEIDENHAIN controls, counters and IK absolute value cards.

Symbols  

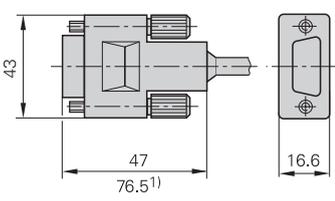

¹⁾with integrated interpolation electronics

The pins on connectors are **numbered** in the direction opposite to those on couplings or flange socket, regardless of whether the contacts are

male contacts  or female contacts. 

When engaged, the connections provide **protection** to IP 67 (D-sub connector: IP 50; IEC 60529). When not engaged, there is no protection.

Accessories for flange socket and M23 mounted couplings

Bell seal
Id. Nr. 266526-01

Threaded metal dust cap
Id. Nr. 219926-01

Connecting Cables $\sim 1 V_{PP}$ TTL

12-pin
M23

		$\sim 1 V_{PP}$ TTL
PUR connecting cable 12-pin: $[4(2 \times 0.14 \text{ mm}^2) + (4 \times 0.5 \text{ mm}^2)]$ $\varnothing 8 \text{ mm}$		
Complete with connector (female) and coupling (male)		298 401-xx
Complete with connector (female) and connector (male)		298 399-xx
Complete with connector (female) and D-sub connector (female) for IK 220		310 199-xx
Complete with connector (female) and D-sub connector (male) for IK 115/IK 215		310 196-xx
With one connector (female)		309 777-xx
Cable only , $\varnothing 8 \text{ mm}$		244 957-01
Mating element on connecting cable to connector on encoder cable	Connector (female) for cable $\varnothing 8 \text{ mm}$ 	291 697-05
Connector on cable for connection to subsequent electronics	Connector (male) for cable $\varnothing 8 \text{ mm}$ $\varnothing 6 \text{ mm}$ 	291 697-08 291 697-07
Coupling on connecting cable	Coupling (male) for cable $\varnothing 4.5 \text{ mm}$ $\varnothing 6 \text{ mm}$ $\varnothing 8 \text{ mm}$ 	291 698-14 291 698-03 291 698-04
Flange socket for mounting on the subsequent electronics	Coupling (female) 	315 892-08
Mounted couplings	With flange (female) $\varnothing 6 \text{ mm}$ $\varnothing 8 \text{ mm}$ 	291 698-17 291 698-07
	With flange (male) $\varnothing 6 \text{ mm}$ $\varnothing 8 \text{ mm}$ 	291 698-08 291 698-31
	With central fastening (male) $\varnothing 6 \text{ mm}$ 	291 698-33
Adapter connector $\sim 1 V_{PP}/11 \mu A_{PP}$ For converting the $1 V_{PP}$ signals to $11 \mu A_{PP}$; M23 connector (female) 12-pin and M23 connector (male) 9-pin		364 914-01

Connecting Cables EnDat

8-pin
M12

17-pin
M23

		EnDat without Incremental signals	EnDat with incremental signals
PUR connecting cable	8-pin: $[(4 \times 0.14 \text{ mm}^2) + (4 \times 0.34 \text{ mm}^2)]$ 17-pin: $[(4 \times 0.14 \text{ mm}^2) + 4(2 \times 0.14 \text{ mm}^2) + (4 \times 0.5 \text{ mm}^2)]$		Ø 6 mm Ø 8 mm
Complete with connector (female) and coupling (male)		368330-xx	323897-xx
Complete with connector (female) and D-sub connector (female) for IK 220		533627-xx	332115-xx
Complete with connector (female) and D-sub connector (male) for IK 115/IK 215		524599-xx	324544-xx
With one connector (female)		559346-xx	309778-xx
Cable only , Ø 8 mm		-	266306-01
Mating element on connecting cable to connector on encoder cable	Connector (female) for cable Ø 8 mm 	-	291697-26
Connector on cable for connection to subsequent electronics	Connector (male) for cable Ø 8 mm Ø 6 mm 	-	291697-27
Coupling on connecting cable	Coupling (male) for cable Ø 4.5 mm Ø 6 mm Ø 8 mm 	-	291698-25 291698-26 291698-27
Flange socket for mounting on the subsequent electronics	Coupling (female) 	-	315892-10
Mounted couplings	With flange (female) Ø 6 mm Ø 8 mm 	-	291698-35
	With flange (male) Ø 6 mm Ø 8 mm 	-	291698-41 291698-29
	With central fastening (male) Ø 6 mm 	-	291698-37

Connecting Cables Fanuc Mitsubishi

		Cable	Fanuc	Mitsubishi
PUR connecting cable				
Complete with M23 connector (female), 17-pin and Fanuc connector [(2 x 2 x 0.14 mm ²) + (4 x 1 mm ²)]	 Fanuc	∅ 8 mm	534855-xx	–
Complete with M23 connector (female), 17-pin and Mitsubishi connector, 20-pin [(2 x 2 x 0.14 mm ²) + (4 x 0,5 mm ²)]	 Mitsubishi 20-pin	∅ 6 mm	–	367958-xx
Complete with M23 connector (female), 17-pin and Mitsubishi connector, 10-pin [(2 x 2 x 0.14 mm ²) + (4 x 1 mm ²)]	 Mitsubishi 10-pin	∅ 8 mm	–	573661-xx
Cable only [(2 x 2 x 0.14 mm ²) + (4 x 1 mm ²)]		∅ 8 mm	354608-01	

General Electrical Information

Power supply

The encoders require a **stabilized dc voltage U_p** as power supply. The respective *Specifications* state the required power supply and the current consumption. The permissible ripple content of the dc voltage is:

- High frequency interference
 $U_{PP} < 250 \text{ mV}$ with $dU/dt > 5 \text{ V}/\mu\text{s}$
- Low frequency fundamental ripple
 $U_{PP} < 100 \text{ mV}$

The values apply as measured at the encoder, i.e., without cable influences. The voltage can be monitored and adjusted with the device's **sensor lines**. If a controllable power supply is not available, the voltage drop can be halved by switching the sensor lines parallel to the corresponding power lines.

Calculation of the **voltage drop**:

$$\Delta U = 2 \cdot 10^{-3} \cdot \frac{L_C \cdot I}{56 \cdot A_p}$$

where ΔU : Line drop in V

L_C : Cable length in m

I : Current consumption in mA

A_p : Cross section of power lines in mm^2

Switch-on/off behavior of the encoders

The output signals are valid no sooner than after switch-on time $t_{SOT} = 1.3 \text{ s}$ (2 s for PROFIBUS-DP; see diagram). During time t_{SOT} they can have any levels up to 5.5 V (with HTL encoders up to U_{Pmax}). If an interpolation electronics unit is inserted between the encoder and the power supply, the unit's switch-on/off characteristics must also be considered. When the power supply is switched off, or when the supply voltage falls below U_{min} , the output signals are also undefined. These data apply only for the encoders listed in the catalog—customized interfaces are not considered.

Encoders with new features and increased performance range may take longer to switch on (longer time t_{SOT}). If you are responsible for developing subsequent electronics, please contact HEIDENHAIN in good time.

Isolation

The encoder housings are isolated against internal circuits.

Rated surge voltage: 500 V (preferred value as per VDE 0110 Part 1, overvoltage category II, contamination level 2)

Cables

It is absolutely necessary to use HEIDENHAIN cables for **safety-related applications**. The **cable lengths** listed in the *Specifications* apply only for HEIDENHAIN cables and the recommended input circuitry of the subsequent electronics.

Durability

All encoders have polyurethane (PUR) cables. PUR cables are resistant to oil, hydrolysis and microbes in accordance with **VDE 0472**. They are free of PVC and silicone and comply with UL safety directives. The **UL certification** AWM STYLE 20963 80 °C 30 V E63216 is documented on the cable.

Temperature range



HEIDENHAIN cables can be used

- for rigid configuration -40 to $+85$ °C
- for frequent flexing -10 to $+85$ °C

Cables with limited resistance to hydrolysis and microbes are rated for up to 100 °C. If required, please ask for assistance from HEIDENHAIN Traunreut.

Bend radius

The permissible bend radii R depend on the cable diameter and the configuration:

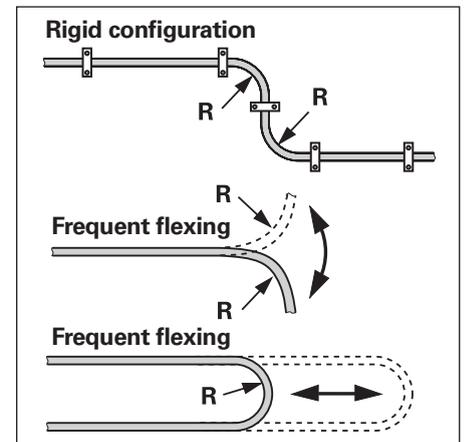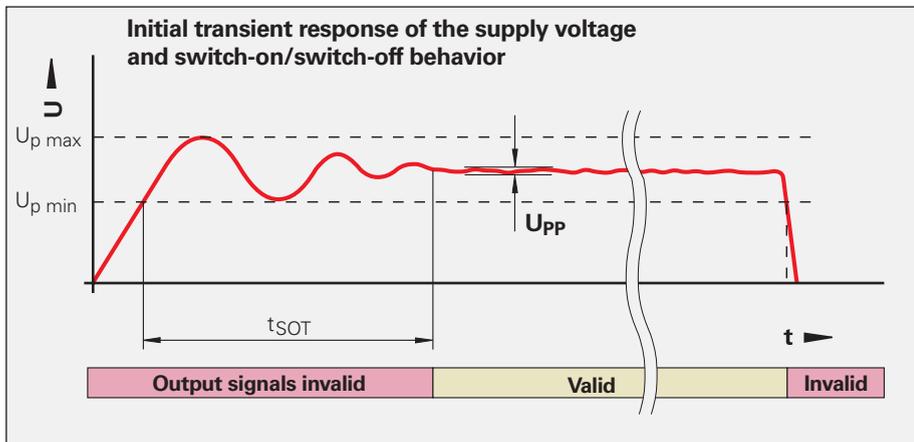

Connect HEIDENHAIN position encoders only to subsequent electronics whose power supply is generated through double or strengthened insulation against line voltage circuits. Also see **IEC 364-4-41: 1992**, modified Chapter 411 regarding "protection against both direct and indirect touch" (PELV or SELV). If position encoders or electronics are used in safety-related applications, they must be operated with protective extra-low voltage (PELV) and provided with overcurrent protection or, if required, with overvoltage protection.

Cables	Cross section of power supply lines A_p				Bend radius R	
	1 V_{PP} /TTL/HTL	11 μA_{PP}	EnDat/SSI 17-pin	EnDat ⁴⁾ 8-pin	Rigid configuration	Frequent flexing
$\varnothing 3.7 \text{ mm}$	0.05 mm^2	–	–	–	$\geq 8 \text{ mm}$	$\geq 40 \text{ mm}$
$\varnothing 4.5 \text{ mm}$ $\varnothing 5.1 \text{ mm}$	0.14/0.05 ²⁾ mm^2	0.05 mm^2	0.05 mm^2	0.14 mm^2	$\geq 10 \text{ mm}$	$\geq 50 \text{ mm}$
$\varnothing 6 \text{ mm}$ $\varnothing 10 \text{ mm}$ ¹⁾	0.19/0.14 ³⁾ mm^2	–	0.08 mm^2	0.34 mm^2	$\geq 20 \text{ mm}$ $\geq 35 \text{ mm}$	$\geq 75 \text{ mm}$ $\geq 75 \text{ mm}$
$\varnothing 8 \text{ mm}$ $\varnothing 14 \text{ mm}$ ¹⁾	0.5 mm^2	1 mm^2	0.5 mm^2	1 mm^2	$\geq 40 \text{ mm}$ $\geq 100 \text{ mm}$	$\geq 50 \text{ mm}$ $\geq 100 \text{ mm}$

¹⁾Metal armor

²⁾Length gauges

³⁾LIDA 400

⁴⁾Also Fanuc, Mitsubishi

Electrically permissible speed/traversing speed

The maximum permissible shaft speed or traversing velocity of an encoder is derived from

- the **mechanically** permissible shaft speed/traversing velocity (if listed in *Specifications*) and
- the **electrically** permissible shaft speed or traversing velocity.

For encoders with **sinusoidal output signals**, the electrically permissible shaft speed or traversing velocity is limited by the $-3\text{dB}/-6\text{dB}$ cutoff frequency or the permissible input frequency of the subsequent electronics.

For encoders with **square-wave signals**, the electrically permissible shaft speed/traversing velocity is limited by

- the maximum permissible scanning frequency f_{max} of the encoder and
- the minimum permissible edge separation a for the subsequent electronics.

For angular or rotary encoders

$$n_{\text{max}} = \frac{f_{\text{max}}}{z} \cdot 60 \cdot 10^3$$

For linear encoders

$$v_{\text{max}} = f_{\text{max}} \cdot \text{SP} \cdot 60 \cdot 10^{-3}$$

where

n_{max} : Electrically permissible speed in rpm

v_{max} : Electrically permissible traversing speed in m/min

f_{max} : Max. scanning/output frequency of encoder or input frequency of subsequent electronics in kHz

z : Line count of the angle or rotary encoder per 360°

SP: Signal period of the linear encoder in μm

Noise-free signal transmission

Electromagnetic compatibility/ CE compliance

When properly installed, and when HEIDENHAIN connecting cables and cable assemblies are used, HEIDENHAIN encoders fulfill the requirements for electromagnetic compatibility according to 89/336/EEC with respect to the generic standards for:

• Noise immunity EN 61000-6-2:

Specifically:	
– ESD	EN 61 000-4-2
– Electromagnetic fields	EN 61 000-4-3
– Burst	EN 61 000-4-4
– Surge	EN 61 000-4-5
– Conducted disturbances	EN 61 000-4-6
– Power frequency magnetic fields	EN 61 000-4-8
– Pulse magnetic fields	EN 61 000-4-9

• Interference EN 61000-6-4:

Specifically:	
– For industrial, scientific and medical (ISM) equipment	EN 55 011
– For information technology equipment	EN 55 022

Transmission of measuring signals— electrical noise immunity

Noise voltages arise mainly through capacitive or inductive transfer. Electrical noise can be introduced into the system over signal lines and input or output terminals.


Possible sources of noise are:

- Strong magnetic fields from transformers, brakes and electric motors
- Relays, contactors and solenoid valves
- High-frequency equipment, pulse devices, and stray magnetic fields from switch-mode power supplies
- AC power lines and supply lines to the above devices

Protection against electrical noise

The following measures must be taken to ensure disturbance-free operation:

- Use only HEIDENHAIN cables.
- Use connectors or terminal boxes with metal housings. Do not conduct any extraneous signals.
- Connect the housings of the encoder, connector, terminal box and evaluation electronics through the shield of the cable. Connect the shielding in the area of the cable outlets to be as induction-free as possible (short, full-surface contact).
- Connect the entire shielding system with the protective ground.
- Prevent contact of loose connector housings with other metal surfaces.
- The cable shielding has the function of an equipotential bonding conductor. If compensating currents are to be expected within the entire system, a separate equipotential bonding conductor must be provided. Also see **EN 50 178 / 4.98 Chapter 5.2.9.5** regarding "protective connection lines with small cross section."
- Do not lay signal cables in the direct vicinity of interference sources (inductive consumers such as contacts, motors, frequency inverters, solenoids, etc.).
- Sufficient decoupling from interference-signal-conducting cables can usually be achieved by an air clearance of 100 mm or, when cables are in metal ducts, by a grounded partition.
- A minimum spacing of 200 mm to inductors in switch-mode power supplies is required. Also see **EN 50 178 / 4.98 Chapter 5.3.1.1** regarding cables and lines, **EN 50 174-2 / 09.01 Chapter 6.7** regarding grounding and potential compensation.
- When using **multiturn encoders in electromagnetic fields** greater than 30 mT, HEIDENHAIN recommends consulting with the main facility in Traunreut.

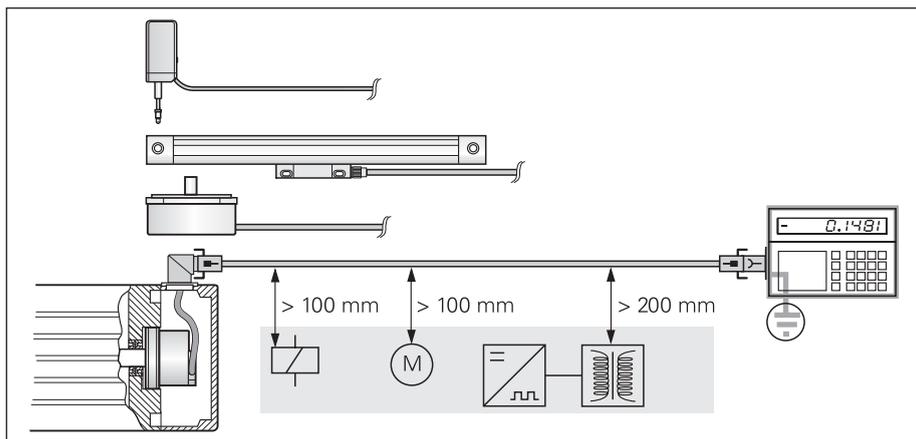

Minimum distance from sources of interference

Both the cable shielding and the metal housings of encoders and subsequent electronics have a shielding function. The housings must have the **same potential** and be connected to the main signal ground over the machine chassis or by means of a separate potential compensating line. Potential compensating lines should have a minimum cross section of 6 mm^2 (Cu).

Evaluation and Display Units

ND 281 B

Position Display Unit

The ND 281 B position display unit contains special display ranges for angle measurement. You can directly connect incremental angle encoders with $\sim 1\text{-V}_{PP}$ output signals and any line count up to 999999 signal periods per revolution. The display value is available via the RS-232-C/V.24 interface for further processing or print-out.



For more information, see the *Numerical Displays for Length and Angle* catalog.

	ND 281 B	
Input signals	$\sim 1\text{ V}_{PP}$	$\sim 11\ \mu\text{A}_{PP}$
Encoder inputs	Flange socket, 12-pin female	Flange socket, 9-pin female
Input frequency	Max. 500 kHz	Max. 100 kHz
Max. cable length	60 m	30 m
Signal subdivision	Up to 1024-fold (adjustable)	
Display step (adjustable)	<i>Decimal degrees:</i> 0.1° to 0.000002° <i>Degrees, minutes, seconds:</i> to 1"	
Display range (adjustable)	0 to 360° -180° 0 +180° 0 to \pm max. display range	
Features	Sorting and tolerance check mode with two limit values Display freeze Two switching limits REF reference mark evaluation	
External operation	Zero reset, preset and latch command	
Interface	RS-232-C/V.24; max. 38400 baud	

IBV Series

Interpolation and Digitizing Electronics

Interpolation and digitizing electronics interpolate and digitize the sinusoidal output signals ($\sim 1\text{ V}_{PP}$) from HEIDENHAIN encoders up to 100-fold, and convert them to TTL square-wave pulse sequences.



For more information, see the *Interpolation and Digitizing Electronics* brochure for IBV 660 as well as the *IBV 100/EXE 100* product overview.

	IBV 101	IBV 102	IBV 660
Input signals	$\sim 1\text{ V}_{PP}$		
Encoder inputs	Flange socket, 12-pin female		
Interpolation (adjustable)	5-fold 10-fold	25-fold 50-fold 100-fold	25-fold 50-fold 100-fold 200-fold 400-fold
Minimum edge separation	Adjustable from 2 to 0.125 μs , depending on input frequency		Adjustable from 0.8 to 0.1 μs , depending on input frequency
Output signals	<ul style="list-style-type: none"> Two TTL square-wave pulse trains U_{a1} and U_{a2} and their inverted signals $\overline{U_{a1}}$ and $\overline{U_{a2}}$ Reference pulse U_{a0} and $\overline{U_{a0}}$ Fault detection signal U_{aS} 		
Power supply	5V \pm 5%		

IK 220

Universal PC Counter Card

The IK 220 is an expansion board for AT-compatible PCs for recording the measured values of **two incremental or absolute linear or angle encoders**. The subdivision and counting electronics **subdivide** the **sinusoidal input signals** to generate up to **4096 measuring steps** per input signal period. A driver software package is included in delivery.



For more information, see the *IK 220 Product Information* sheet.

	IK 220			
Input signals (switchable)	~ 1 V _{pp}	~ 11 μA _{pp}	EnDat 2.1	SSI
Encoder inputs	Two D-sub connectors (15-pin), male			
Max. input frequency	500 kHz	33 kHz	–	
Max. cable length	60 m		10 m	
Signal subdivision (signal period to meas. step)	Up to 4096-fold			
Data register for measured values (per channel)	48 bits (44 bits used)			
Internal memory	For 8192 position values			
Interface	PCI bus (plug and play)			
Driver software and demonstration program	For WINDOWS 98/NT/2000/XP In VISUAL C++, VISUAL BASIC and BORLAND DELPHI			
Dimensions	Approx. 190 mm × 100 mm			

HEIDENHAIN Measuring Equipment

For Incremental Angle Encoders

The **PWM 9** is a universal measuring device for checking and adjusting HEIDENHAIN incremental encoders. There are different expansion modules available for checking the different encoder signals. The values can be read on an LCD monitor. Soft keys provide ease of operation.



PWM 9	
Inputs	Expansion modules (interface boards) for 11 μ A _{PP} ; 1 V _{PP} ; TTL; HTL; EnDat*/SSI*/commutation signals *No display of position values or parameters
Features	<ul style="list-style-type: none"> • Measures signal amplitudes, current consumption, operating voltage, scanning frequency • Graphically displays incremental signals (amplitudes, phase angle and on-off ratio) and the reference-mark signal (width and position) • Displays symbols for the reference mark, fault detection signal, counting direction • Universal counter, interpolation selectable from single to 1024-fold • Adjustment support for exposed linear encoders
Outputs	<ul style="list-style-type: none"> • Inputs are connected through to the subsequent electronics • BNC sockets for connection to an oscilloscope
Power supply	10 to 30 V, max. 15 W
Dimensions	150 mm x 205 mm x 96 mm

The **PWT** is a simple adjusting aid for HEIDENHAIN incremental encoders. In a small LCD window the signals are shown as bar charts with reference to their tolerance limits.



	PWT 10	PWT 17	PWT 18
Encoder input	~ 11 μ A _{PP}	□ TTL	~ 1 V _{PP}
Features	Measurement of signal amplitude Wave-form tolerance Amplitude and position of the reference mark signal		
Power supply	Via power supply unit (included)		
Dimensions	114 mm x 64 mm x 29 mm		

For Absolute Angle Encoders

The **IK 215** is an adapter card for PCs for inspecting and testing absolute HEIDENHAIN encoders with EnDat or SSI interface. Parameters can be read and written via the EnDat interface.



IK 215	
Encoder input	EnDat (absolute value or incremental signals) or SSI
Interface	PCI bus, Rev. 2.1
Application software	Operating system: Windows 2000/XP Features: Display of position value Counter for incremental signals EnDat functions Mounting software for ExI 1100/1300
Signal subdivision for incremental signals	Up to 65536-fold
Dimensions	100 mm x 190 mm

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5
83301 Traunreut, Germany

☎ +49 (8669) 31-0

FAXI +49 (8669) 5061

E-Mail: info@heidenhain.de

www.heidenhain.de

DE HEIDENHAIN Technisches Büro Nord

12681 Berlin, Deutschland

☎ (030) 54705-240

E-Mail: tbn@heidenhain.de

HEIDENHAIN Technisches Büro Mitte

08468 Heinsdorfergrund, Deutschland

☎ (03765) 69544

E-Mail: tbm@heidenhain.de

HEIDENHAIN Technisches Büro West

58093 Hagen, Deutschland

☎ (02331) 9579-0

E-Mail: tbwv@heidenhain.de

HEIDENHAIN Technisches Büro Südwest

70771 Leinfelden-Echterdingen, Deutschland

☎ (0711) 993395-0

E-Mail: tbsw@heidenhain.de

HEIDENHAIN Technisches Büro Südost

83301 Traunreut, Deutschland

☎ (08669) 31-1345

E-Mail: tbs0@heidenhain.de

AR NAKASE SRL.

B1653AOX Villa Ballester, Argentina

☎ +54 (11) 47684242

E-Mail: nakase@nakase.com

AT HEIDENHAIN Techn. Büro Österreich

83301 Traunreut, Germany

☎ +49 (8669) 31-1337

E-Mail: tba@heidenhain.de

AU FCR Motion Technology Pty. Ltd

Laverton North 3026, Australia

☎ +61 (3) 93626800

E-Mail: vicsales@fcrmotion.com

BE HEIDENHAIN NV/SA

1760 Roosdaal, Belgium

☎ +32 (54) 343158

E-Mail: sales@heidenhain.be

BG ESD Bulgaria Ltd.

Sofia 1172, Bulgaria

☎ +359 (2) 9632949

E-Mail: info@esd.bg

BR DIADUR Indústria e Comércio Ltda.

04763-070 – São Paulo – SP, Brazil

☎ +55 (11) 5696-6777

E-Mail: diadur@diadur.com.br

BY Belarus → RU

CA HEIDENHAIN CORPORATION

Mississauga, Ontario L5T2N2, Canada

☎ +1 (905) 670-8900

E-Mail: info@heidenhain.com

CH HEIDENHAIN (SCHWEIZ) AG

8603 Schwerzenbach, Switzerland

☎ +41 (44) 8062727

E-Mail: verkauf@heidenhain.ch

CN DR. JOHANNES HEIDENHAIN (CHINA) Co., Ltd.

Beijing 101312, China

☎ +86 10-80420000

E-Mail: sales@heidenhain.com.cn

CS Serbia and Montenegro → BG

CZ HEIDENHAIN s.r.o.

106 00 Praha 10, Czech Republic

☎ +420 272658131

E-Mail: heidenhain@heidenhain.cz

DK TP TEKNIK A/S

2670 Greve, Denmark

☎ +45 (70) 100966

E-Mail: tp-gruppen@tp-gruppen.dk

ES FARRESA ELECTRONICA S.A.

08028 Barcelona, Spain

☎ +34 934092491

E-Mail: farresa@farresa.es

FI HEIDENHAIN Scandinavia AB

02770 Espoo, Finland

☎ +358 (9) 8676476

E-Mail: info@heidenhain.fi

FR HEIDENHAIN FRANCE sarl

92310 Sèvres, France

☎ +33 0141143000

E-Mail: info@heidenhain.fr

GB HEIDENHAIN (G.B.) Limited

Burgess Hill RH15 9RD, United Kingdom

☎ +44 (1444) 247711

E-Mail: sales@heidenhain.co.uk

GR MB Milionis Vassilis

17341 Athens, Greece

☎ +30 (210) 9336607

E-Mail: bmilioni@otenet.gr

HK HEIDENHAIN LTD

Kowloon, Hong Kong

☎ +852 27591920

E-Mail: service@heidenhain.com.hk

HR Croatia → SL

HU HEIDENHAIN Kereskedelmi Képviselet

1239 Budapest, Hungary

☎ +36 (1) 4210952

E-Mail: info@heidenhain.hu

ID PT Servitama Era Toolsindo

Jakarta 13930, Indonesia

☎ +62 (21) 46834111

E-Mail: ptset@group.gts.co.id

IL NEUMO VARGUS MARKETING LTD.

Tel Aviv 61570, Israel

☎ +972 (3) 5373275

E-Mail: neumo@neumo-vargus.co.il

IN ASHOK & LAL

Chennai – 600 030, India

☎ +91 (44) 26151289

E-Mail: ashoklal@satyam.net.in

IT HEIDENHAIN ITALIANA S.r.l.

20128 Milano, Italy

☎ +39 02270751

E-Mail: info@heidenhain.it

JP HEIDENHAIN K.K.

Tokyo 102-0073, Japan

☎ +81 (3) 3234-7781

E-Mail: sales@heidenhain.co.jp

KR HEIDENHAIN LTD.

Suwon, South Korea, 443-810

☎ +82 (31) 2011511

E-Mail: info@heidenhain.co.kr

MK Macedonia → BG

MX HEIDENHAIN CORPORATION MEXICO

20235 Aguascalientes, Ags., Mexico

☎ +52 (449) 9130870

E-Mail: info@heidenhain.com

MY ISOSERVE Sdn. Bhd

56100 Kuala Lumpur, Malaysia

☎ +60 (3) 91320685

E-Mail: isoserve@po.jaring.my

NL HEIDENHAIN NEDERLAND B.V.

6716 BM Ede, Netherlands

☎ +31 (318) 581800

E-Mail: verkoop@heidenhain.nl

NO HEIDENHAIN Scandinavia AB

7300 Orkanger, Norway

☎ +47 72480048

E-Mail: info@heidenhain.no

PH Machinebanks Corporation

Quezon City, Philippines 1113

☎ +63 (2) 7113751

E-Mail: info@machinebanks.com

PL APS

02-473 Warszawa, Poland

☎ +48 228639737

E-Mail: aps@apserwis.com.pl

PT FARRESA ELECTRÓNICA, LDA.

4470 - 177 Maia, Portugal

☎ +351 229478140

E-Mail: fep@farresa.pt

RO Romania → HU

RU OOO HEIDENHAIN

125315 Moscow, Russia

☎ +7 (495) 931-9646

E-Mail: info@heidenhain.ru

SE HEIDENHAIN Scandinavia AB

12739 Skärholmen, Sweden

☎ +46 (8) 53193350

E-Mail: sales@heidenhain.se

SG HEIDENHAIN PACIFIC PTE LTD.

Singapore 408593,

☎ +65 6749-3238

E-Mail: info@heidenhain.com.sg

SK Slovakia → CZ

SL Posredništvo HEIDENHAIN

SAŠO HÜBL s.p.

2000 Maribor, Slovenia

☎ +386 (2) 4297216

E-Mail: hubl@siol.net

TH HEIDENHAIN (THAILAND) LTD

Bangkok 10250, Thailand

☎ +66 (2) 398-4147-8

E-Mail: info@heidenhain.co.th

TR T&M Mühendislik San. ve Tic. LTD. ŞTİ.

34738 Erenköy-Istanbul, Turkey

☎ +90 (216) 3022345

E-Mail: info@tm mühendislik.com.tr

TW HEIDENHAIN Co., Ltd.

Taichung 407, Taiwan

☎ +886 (4) 23588977

E-Mail: info@heidenhain.com.tw

UA Ukraine → RU

US HEIDENHAIN CORPORATION

Schaumburg, IL 60173-5337, USA

☎ +1 (847) 490-1191

E-Mail: info@heidenhain.com

VE Maquinaria Diekmann S.A.

Caracas, 1040-A, Venezuela

☎ +58 (212) 6325410

E-Mail: purchase@diekmann.com.ve

VN AMS Advanced Manufacturing

Solutions Pte Ltd

HCM City, Viêt Nam

☎ +84 (8) 9123658 - 8352490

E-Mail: davidgoh@amsvn.com

ZA MAFEMA SALES SERVICES C.C.

Midrand 1685, South Africa

☎ +27 (11) 3144416

E-Mail: mailbox@mafema.co.za

